

SPECIFIC VEHICLE	AL ARM FITTING	

REV. 00

www.cobra.it

X **PETROL VEL SATIS*** RENAULT **02** → **DIESEL** MAKE

Models with original equipment keyless entry system.

ALARM/SIREN **POSITION**

Position the compact alarms and the sirens on the driver's side wheelhouse, on

the left of the boot.

CENTRAL UNIT POSITION

Position the modular systems and the modules in the above mentioned space.

POWER SUPPLY

+30: Connect to the 1 mm² RED wire, at the position nr.5 of the 6 way black

connector located behind the driver's side covering, in the boot.

-31: Connect with a terminal directly to an original ground terminal located in

the upper part of the prearrangement of the antitheft.

IGNITION WIRE

+15/54: Connect to the 1,5 mm² YELLOW wire, at the position nr.3 of the 6 way black connector located behind the driver's side covering in the boot.

DIRECTION INDICATORS

Parking lights control

Connect to the wires: GREEN at the position nr.9 and BROWN at the position nr.8 of the connector coming out of the UCH operating central located under

the driver's side dashboard.

ELECTRIC WINDOWS

The control centrals of the windows motors do not allow the connection to

make the windows locking.

ACTIV./DEACTIVATION CONTROLS

Connections antithefts/vehicle

Art.3800 Vehicle ORANGE pos. nr. 4 GREY/BLACK YELLOW/BLACK ORANGE pos. nr. 5 VIOLET/WHITE

ground

ORANGE BROWN pos. B1 VIOLET VIOLET pos. A3 ORANGE/WHITE positiva

Position

grey comb of the white connector grey comb of the white connector

car body

original unlock/lock push button original unlock/lock push button power supply in the fuse box

IMMOBILISATION POINT

Starting locking

Cut the ORANGE wire, at the position nr. 1, of the 4 way black connector coming out of the starting push button, on the right of the steering wheel.

BONNET SWITCH

Install an additional switch on the headlamp support plate, driver's side.

DOORS SWITCH

Connect to the WHITE wire, at the position nr. 2, of the connector coming out of

the boot lamp.

BOOT SWITCH

Connect to the PINK wire, at the position nr. 2, of the connector coming out of

the boot lamp.