



## SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

**REV. 00**

www.cobra.it

MAKE **SAAB** MOD. **9-5 \*** YEAR. **03** → PETROL  DIESEL

\* Models with original equipment keyless entry system.

- ALARM/SIREN POSITION** Position the compact alarms and the sirens on the side member, driver's side, in the engine compartment..
- CENTRAL UNIT POSITION** Position the modular systems on the rear left mudguard behind the covering, inside the boot.
- POWER SUPPLY** **+30:** Connect to the RED wire, at the position B4, in the black connector in the central located behind the covering in the left side of the boot.  
**-31:** Connect to the BLACK wire, at the position B1, in the BLUE connector in the central located behind the covering in the left side of the boot.
- IGNITION WIRE** **+15/54:** Connect to RED/BLUE wire, at the position B6, in the black connector in the central located behind the covering in the left side of the boot..
- DIRECTION INDICATORS** For the connection of the front direction indicators connect to the YELLOW wire at the position nr.3 and LIGHT BLUE wire at the position nr.2 located in the 50 way connector placed in the lower part of the fuse box, in the driver's side engine compartment.  
For the connection of the rear direction indicators connect to the BROWN wire at the position D5 and to the BROWN wire at the position D6, in the blue connector, in the central located behind the covering of the boot, left side.  
Divide the lines with 4 diodes.
- ACTIV./DEACTIVATION CONTROLS**
- | Connections antitheft/vehicle | Vehicle | Position                |
|-------------------------------|---------|-------------------------|
| <b>Art. 3800</b>              |         |                         |
| YELLOW/BLACK                  | BROWN   | BLUE connector, pos. A6 |
| GREY/BLACK                    | GREY    | BLUE connector, pos. A7 |
| VIOLET                        | BROWN   | BLUE connector, pos. D5 |
| ORANGE                        | ground  | car body                |
| VIOLET/WHITE                  | ground  | car body                |
| ORANGE/WHITE                  | ground  | car body                |
- The blue connector is coming out of the operating central located behind the covering of the boot, left side. Refer to the '**A**' **diagram** of the dedicated installations manual in the kit of the antitheft.
- IMMOBILISATION POINT** **Fuel pump**  
Cut the wire coming out of the connector of the inertial switch.
- STARTER** **+50:** Cut the wire located in the wiring harness coming out of the ignition key.
- BONNET SWITCH** Install an additional switch on the headlamp support plate, driver's side.
- DOORS SWITCH** Connect to the BLACK wire located in the lamp above the rudder bar under the driver's side dashboard.
- BOOT SWITCH** Connect to the wire located in the wiring harness coming out of the boot lamp.