



## CAR SECURITY

### SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

www.cobra.it

MAKE

**SEAT**

MOD.

**ALHAMBRA\***

YEAR.

**02** →

PETROL   
DIESEL

\* Models with original equipment keyless entry system.

#### ALARM/SIREN POSITION

Position the compact alarms and the sirens in the engine compartment, on the bulkhead near the battery.

#### CENTRAL UNIT POSITION

Position the modular systems and the modules behind the fuse box, under the driver's side dashboard.

#### POWER SUPPLY

**+30:** connect to the 4 mm<sup>2</sup> RED wire located in the multiway black connector, behind the fuse box.

**- 31:** connect with a cable terminal to one of the ground terminals located on the driver's side bulkhead.

#### IGNITION WIRE

**+15/54:** connect to the 3 mm<sup>2</sup> YELLOW/BLACK wire located in the wiring harness under the steering column.

#### DIRECTION INDICATORS

Connect to the 1 mm<sup>2</sup> WHITE/BLACK wire at the position nr. 5 and to the GREEN/BLACK wire at the position nr. 6, located in the black connector, above on the left, in the frontal part of the fuse box.

#### ELECTRIC WINDOWS

##### Comfort locking

##### Negative control signal

The closing of the electric windows is obtained timing the 1 mm<sup>2</sup> GREY wire (the same wire used for the locking of the doors) located in the wiring harness of the connector, on the coming out of the driver's side door.

#### ACTIVAT./DEACTIVATION CONTROLS

##### Connections vehicle/art. 3800

Refer to the **diagram nr. 144.**

##### Attention:

The roof lamp switch off after about 25s. During programming DO NOT cut out the BLUE/PINK wire of the antitheft to advance the quick blinking of the led but wait until the automatic switch off of the roof lamp.

#### IMMOBILISATION POINT 1

##### Fuel pump

Cut the YELLOW/BLUE wire at the position nr. 3 of the connector marked "G1" behind the fuse box.

#### IMMOBILISATION POINT 2

##### Electronic central unit

Cut the RED/YELLOW wire in the 6 way connector marked "N" in the fuse box.

#### STARTER

**+ 50:** Cut the RED/BLACK wire located in the connector marked "H1" behind the fuse box.

#### BONNET SWITCH

Install an additional switch on the right lateral bonnetstop, driver's side.

#### DOORS AND BOOT SWITCH

Connect to the 1 mm<sup>2</sup> BROWN/YELLOW wire located in the black multiway connector, in the lower part on the left, in the frontal part of the fuse box.



CAR SECURITY


SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

www.cobra.it

FITTING DIAGRAM N° 144

Diagram to connect art. 3800 on  
**SEAT ALHAMBRA** year 2002

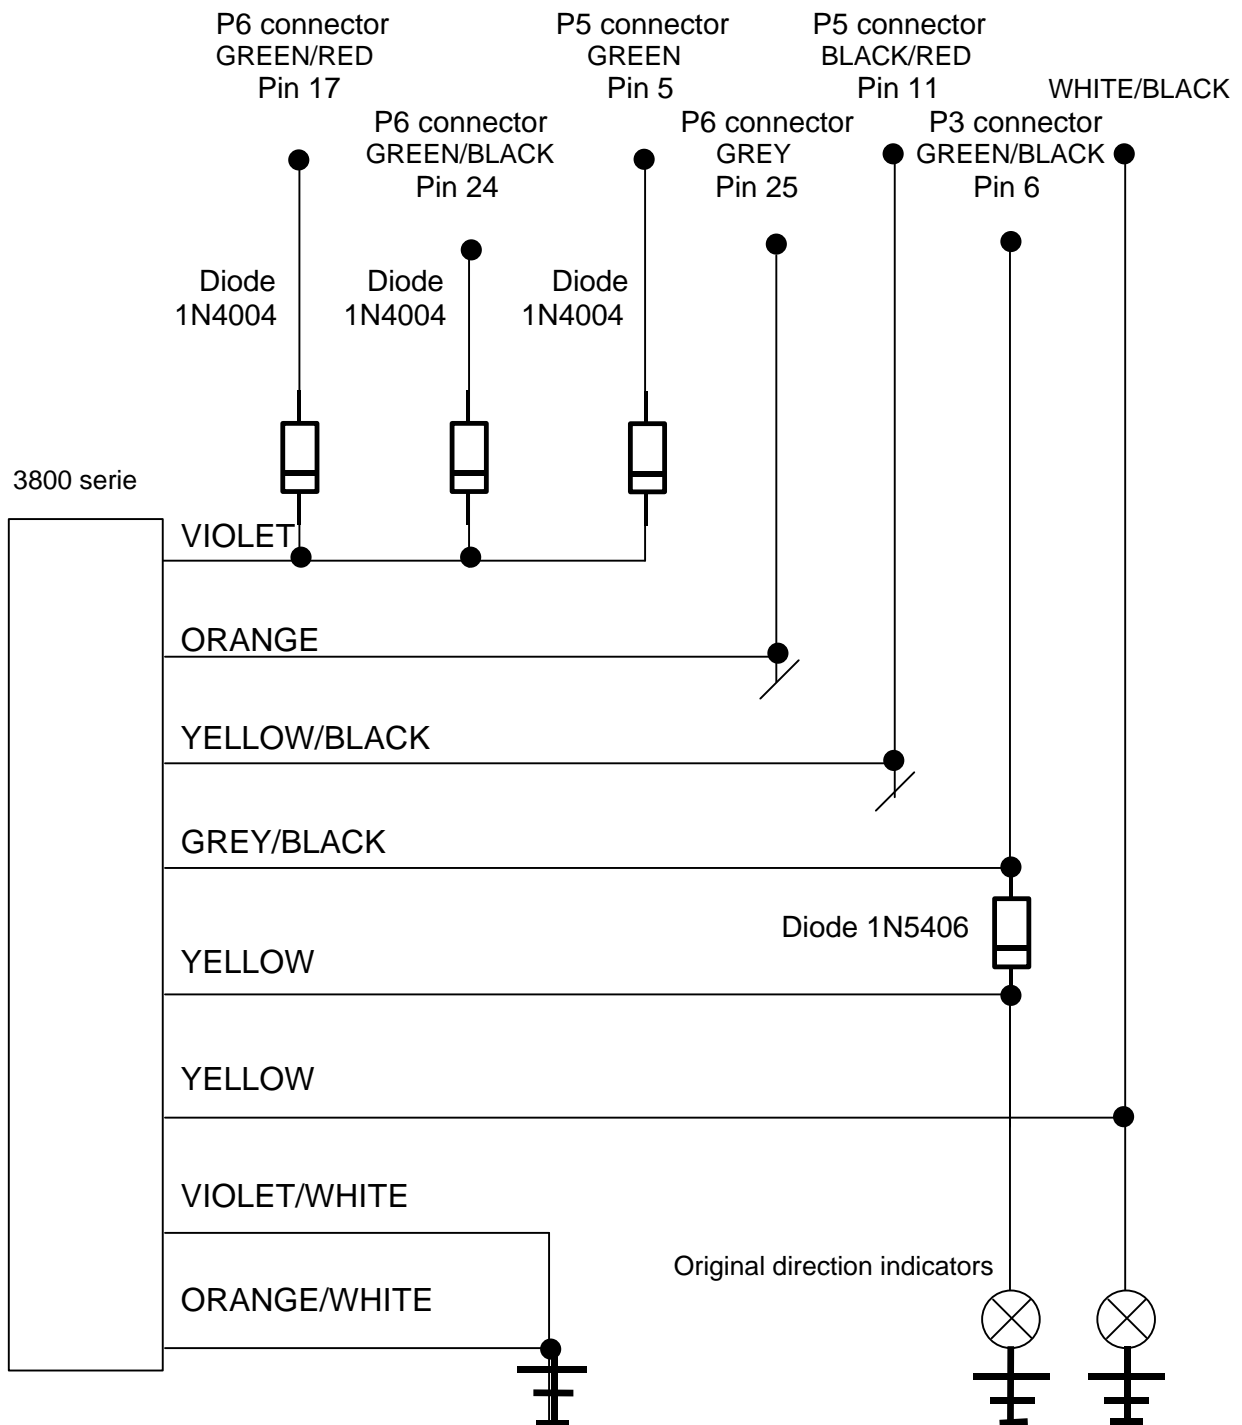

Note: This information is not binding, therefore it must be considered only an example for installation purposes that must be executed as per the instructions given on the product installation manual.

sealh02gbbt.doc