



CAR SECURITY

SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

www.cobra.it

MAKE	SEAT	MOD.	AROSA	YEAR	97 →	PETROL	<input checked="" type="checkbox"/>	DIESEL	<input type="checkbox"/>
ALARM/SIREN POSITION	Position the compact alarms and the sirens in the engine compartment, on the side of the radiator bowl. The modular systems and the modules should be positioned on the left, under the dashboard, driver's side.								
POWER SUPPLY	+ 30: connect a 4 mm ² VIOLET wire located in the general supply wiring harness of the fuse box. - 31: connect to one of the ground terminals located in the left lateral panel, driver's side.								
IGNITION WIRE	+ 15/54: Find the positive ignition wire verifying its presence also during the engine ignition.								
DIRECTION INDICATORS	Connect to the 1 mm ² BLACK/GREEN and BLACK/WHITE wires located in the wiring harness along the steering column and coming out of the selector switch and going to the fuse box.								
ELECTRIC WINDOWS	Positive control signal Front window, driver's side: cut the 1,5 mm ² BLACK/WHITE wire. Front window, passenger's side: cut the 1,5 mm ² BLACK/VIOLET wire. The connection should be made in the wiring harness located in the 10 way connector coming out of the front door, driver's side.								
CENTRAL DOORS LOCKING	Negative control signal Connect to the 1 mm ² GREEN wire (unlock) and to the BLACK/GREEN wire located in the wiring harness located in the wiring harness coming out of the front door, driver's side.								
IMMOBILISATION POINT	Cut the RED/YELLOW wire located in the wiring harness coming out of the 10 way green connector placed on the connectors holder plate, under the dashboard driver's side.								
STARTER	+50: Cut the RED/BLACK wire, at the position nr. 1, of the 10 way green connector placed on the connectors holder plate, under the dashboard driver's side.								
BONNET SWITCH	Install an additional switch on the front headlamp support plate, in correspondence with the left lateral headlamp.								
DOORS SWITCH	Connect to the 1 mm ² LIGHT BLUE/BROWN in the wiring harness located in the connector coming out of the front door, driver's side.								
BOOT SWITCH	Connect to the 1 mm ² RED/WHITE wire located in the wiring harness coming out of the 2 way connector of the boot lamp.								