



CAR SECURITY

SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

www.cobra.it

MAKE

SEAT

MOD.

LEON

YEAR.

01 →

PETROL
DIESEL



ALARM/SIREN POSITION

Position the compact alarms and the sirens on the member of the shock absorber, driver's side

CENTRAL UNIT POSITION

Position the modular systems and the modules under the dashboard, driver's side.

POWER SUPPLY

+ 30: connect to the 5 mm² RED wire located in the fuse box.
- 31: connect with a ring terminal directly to the car body.

IGNITION WIRE

+15/54: connect to the 4 mm² BLACK wire located in a multiway connector in the fuse box.

DIRECTION INDICATORS

Connect to the BLACK/WHITE and BLACK/GREEN wires in the wiring harness coming out of the brown connector placed behind the fuse box.

ELECTRIC WINDOWS

Negative control signal

The closing of the electric windows is obtained timing to 24s the YELLOW/LIGHT BLUE wire used for the closing of the doors.

CENTRAL DOORS LOCKING

Negative control signal

Connect to the YELLOW/LIGHT BLUE wire (lock) and VIOLET (YELLOW/GREEN) wire (unlock) located in the wiring harness directly inside the driver's side door.

IMMOBILISATION POINT 1

Gasoil pump

Cut the BLACK/VIOLET wire located in the wiring harness coming out of the 10 AMP fuse nr. 29, in the fuse box, placed on the left of the dashboard, driver's side.

STARTER CUT OFF

+ 50: Cut the RED/BLACK wire located at the position nr. 3, in the wiring harness coming out of the 6 way light brown connector placed on the connector holder plate, under the dashboard, driver's side.

BONNET SWITCH

Install an additional switch on the front headlamp support plate, driver's side.

DOORS SWITCH

Connect to the PINK/LIGHT BLUE (BLUE/GREY) wire located at the position nr. 16 of the light blue connector coming out of the control system placed on the left of the steering column.

BOOT SWITCH

Connect to the BROWN/BLACK wire located at the position nr. 15 of the light blue connector coming out of the control system placed on the left of the steering column.