



CAR SECURITY

SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

www.cobra.it

MAKE

SKODA

MOD.

OCTAVIA 1.9

YEAR.

01 →

PETROL
DIESEL

ALARM/SIREN POSITION

Position the compact alarms and the sirens on the left of the engine compartment on the support bracket of the filter for the air-conditioning system. To enter this zone it is necessary to take down the left wheelhouse.

CENTRAL UNIT POSITION

Position the modular systems and the modules near the ZM central located behind the steering column.

POWER SUPPLY

+ 30: connect to one of the positive located on the feed bar placed under the steering column or as alternative, to the RED/WHITE wire located at the position nr. 22 of the ZM central.

- 31: use the original ground wire located near the installation point of the alarm/siren, in the engine compartment. For the modular systems and eventual module it is suggested to connect to the original ground drive located on the left pillar or as alternative, to the BROWN wire at the position nr. 23 of the ZM central.

IGNITION WIRE

+ 15/54: connect to the YELLOW/RED wire at the position nr. 3 of the ZM central or as alternative, connect to the BLACK/WHITE wire at the position nr. 5 located in the connector coming out of the same central.

DIRECTION INDICATORS

Connect to the BLACK/WHITE and BLACK/GREEN wires in the wiring harness behind the sill cover driver's side.

ELECTRIC WINDOWS

Comfort closing Negative control signal

This vehicle has the comfort system so, the total closure of the electric windows is obtained timing the same WHITE/BLUE wire used for the closing of the doors.

CENTRAL DOORS LOCKING

Negative control signal

Connect to the WHITE/YELLOW wire directly on the lock switch (or as alternative to the WHITE/BLUE wire at the position nr. 2 of the ZM central) (lock) and to the BLACK/BLUE wire at the position nr. 4 (unlock) located on the coming out of the ZM central.

IMMOBILISATION POINT

Gasoil pump

Cut the BLACK wire at the position nr. 3 located in the wiring harness coming out of the red connector, under the dashboard on the relay bar.

BONNET SWITCH

Install an additional switch on the front headlamp support plate.

DOORS SWITCH

Connect to the BLUE/BROWN wire at the position nr. 13 (nr. 16) of the connector coming out of the ZM central.

BOOT SWITCH

Connect to the BROWN/BLACK wire at the position nr. 15 of the connector coming out of the ZM central.