



CAR SECURITY

SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

www.cobra.it

MAKE **SUZUKI**

MOD. **GRAND VITARA**

YEAR. **01** →

PETROL
DIESEL

ALARM/SIREN POSITION	Position the compact alarms and the sirens on the driver's side wheelhouse. Pass the cables using the original core hitch of the bonnet opener cable.
CENTRAL UNIT POSITION	Position the modular systems and the modules under the dashboard, driver's side.
POWER SUPPLY	+ 30 : connect to the big wire that drives the fuse box. - 31 : connect to one of the ground terminals located on the base of the driver's side support.
IGNITION WIRE	+ 15/54 : connect to the BLACK/WHITE wire with SILVER reference, at the position nr. 4, located in the 14 way violet connector coming out of the central doors locking unit placed behind the left lateral bulkhead, driver's side.
DIRECTION INDICATORS	Connect to the GREEN/YELLOW wire with silver reference and GREEN/RED wire with SILVER reference located in the 16 way WHITE connector, placed in the lower part of the fuse box.
ELECTRIC WINDOWS	Negative controls Front window, driver's side: cut the YELLOW wire located in the wiring harness coming out of the push-button inside the driver's side door. Front window, passenger's side: cut the GREEN/BLACK wire located in the wiring harness coming out of the connector of the driver's side door. Rear window, driver's side: cut the GREEN/YELLOW wire located in the wiring harness coming out of the 20 way white connector placed in the lower part of the fuse box. Rear window, passenger's side: Cut the GREEN/WHITE wire located in the wiring harness coming out of the 16 way violet connector placed in the lower part of the fuse box.
CENTRAL DOORS LOCKING	Negative control signal Connect to the PINK wire with SILVER reference, at the position nr. 8 (lock) and to the PINK/GREEN wire with SILVER reference, at the position nr. 9 (unlock) located in the wiring harness coming out of the central doors locking unit placed behind the left lateral bulkhead, driver's side.
IMMOBILISATION POINT	Gasoil pump Cut the PINK/BLACK wire with SILVER reference located in the wiring harness coming out of the 20 way white connector, placed in the lower part of the fuse box, under the driver's side dashboard.
STARTER	+ 50 : Cut the BLACK /YELLOW wire located in the wiring harness coming out of the 9 way grey connector, placed in the upper part of the fuse box, under the driver's side dashboard.
BONNET SWITCH	Install an additional switch on the front headlamp support plate, driver's side.
DOORS AND BOOT SWITCH	Connect to the BLACK/RED wire with SILVER reference located at the position nr.10 of the 14 way violet connector coming out of the central doors locking unit placed behind the left lateral bulkhead, driver's side.