

SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

www.cobra.it

MAKE SUZUKI

MOD. IGNIS

FAR 02

2 2^{nd} sem. \rightarrow

PETROL DIESEL

ROL X

ALARM/SIREN POSITION

Position the compact alarms and the sirens on the support of the shock absorber, driver's side. Pass the cables through the original rubber sleeve located in the bulkhead that divides the engine compartment and the driver's side passenger's compartment, the same rubber sleeve of the bonnet opening wire.

CENTRAL UNIT POSITION

The modular systems and the modules should be positioned under the

dashboard, driver's side.

POWER SUPPLY

+30: connect to the 3 mm² RED wire located in a multiway connector, in the fuse

box.

-31: connect to one of the ground terminal located behind the left lateral

bulkhead, driver's side.

IGNITION WIRE

+15/54: Connect to the YELLOW wire with SILVER references located in the

wiring harness behind the sill cover, driver's side.

DIRECTION INDICATORS

Connect to the BLUE/YELLOW wire with SILVER references and to the GREEN/RED wire with SILVER references located in the wiring harness behind

the driver's side sill cover.

ELECTRIC WINDOWS

Positive control signal Front window, driver's side:

cut the the RED wire with SILVER references located in the wiring harness

coming out of the control switch, directly inside the driver's side door.

Front window, passenger's side:

cut the RED/WHITE wire with SILVER references, at the position nr. 7, coming out of the 14 way white connector, located under the dashboard driver's side, in

the upper part of the bulkhead.

CENTRAL DOORS LOCKING

Negative control signal

Connect to the BROWN/WHITE wire with SILVER references (unlock) and to the BROWN wire with SILVER references (lock) in the 14 way white connector.

located in the upper part, under the driver's side dashboard.

IMMOBILISATION POINT

Fuel pump

Cut the PINK wire with SILVER references located in the wiring harness behind

the sill cover, driver's side.

STARTER

+50: Cut the 1,5 mm² BLACK/YELLOW wire located in the 6 way white

connector, directly on the coming out of the ignition key.

BONNET SWITCH

Install an additional switch on the front headlamp support plate, driver's side.

DOORS AND BOOT SWITCH

Connect to the BLACK/RED wire located in the wiring harness behind the

driver's side sill cover.