



## CAR SECURITY

### SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

www.cobra.it

MAKE	MOD.	YEAR.	PETROL	DIESEL
<b>SUZUKI</b>	<b>JIMNY</b>	<b>01</b> →	<input checked="" type="checkbox"/>	<input type="checkbox"/>
<b>ALARM/SIREN POSITION</b>	Position the compact alarms and the sirens in the engine compartment, on the support of the shock absorber, driver's side.			
<b>CENTRAL UNIT POSITION</b>	The modular systems and the modules should be positioned under the dashboard, driver's side.			
<b>POWER SUPPLY</b>	<b>+30:</b> connect to one of the positive shunting, in the fuse box. <b>- 31:</b> connect directly to the car body.			
<b>IGNITION WIRE</b>	<b>+15/54:</b> Connect to the BLACK/WHITE wire located in the wiring harness coming out of the connector of the ignition key.			
<b>DIRECTION INDICATORS</b>	Connect to the GREEN/YELLOW and GREEN/RED wires located in the wiring harness coming out of the 22 way white connector placed behind the driver's side sill cover.			
<b>ELECTRIC WINDOWS</b>	<b>Positive control signal</b> <b>Front window, driver's side:</b> cut the RED/YELLOW wire with LIGHT BLUE references located in the wiring harness coming out directly from the switch inside the driver's side door. <b>Front window, passenger's side:</b> cut the RED/BLACK wire with LIGHT BLUE references located in the wiring harness coming out of the 12 way white connector, behind the left lateral bulkhead, driver's side.			
<b>CENTRAL DOORS LOCKING</b>	<b>Negative control signal</b> Cut the YELLOW/BROWN wire located in the wiring harness coming out of the connector of the driver's side door. For the Bridge serie antithefts make reference to the <b>diagram nr.70</b> and for the 3100 serie antithefts make reference to the <b>diagram nr. 70A</b> .			
<b>IMMOBILISATION POINT</b>	<b>Fuel pump</b> Cut the BLACK/WHITE wire located in the wiring harness coming out of the connector of the ignition key.			
<b>STARTER</b>	<b>+50:</b> Cut the control wire of the relay of the starter directly in the wiring harness coming out of the ignition key.			
<b>BONNET SWITCH</b>	Install an additional switch on the front headlamp support grill, driver's side.			
<b>DOORS SWITCH</b>	Connect to the BLACK/RED wire located in the wiring harness coming out of the 22 way light blue connector, placed behind the driver's side sill cover.			
<b>BOOT SWITCH</b>	Install an additional switch on the bootstop.			



CAR SECURITY


SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

www.cobra.it

FITTING DIAGRAM N°70

Diagram to make the central doors locking on  
**SUZUKI JIMNY mod. 2000**  
(for Bridge serie antithefts)

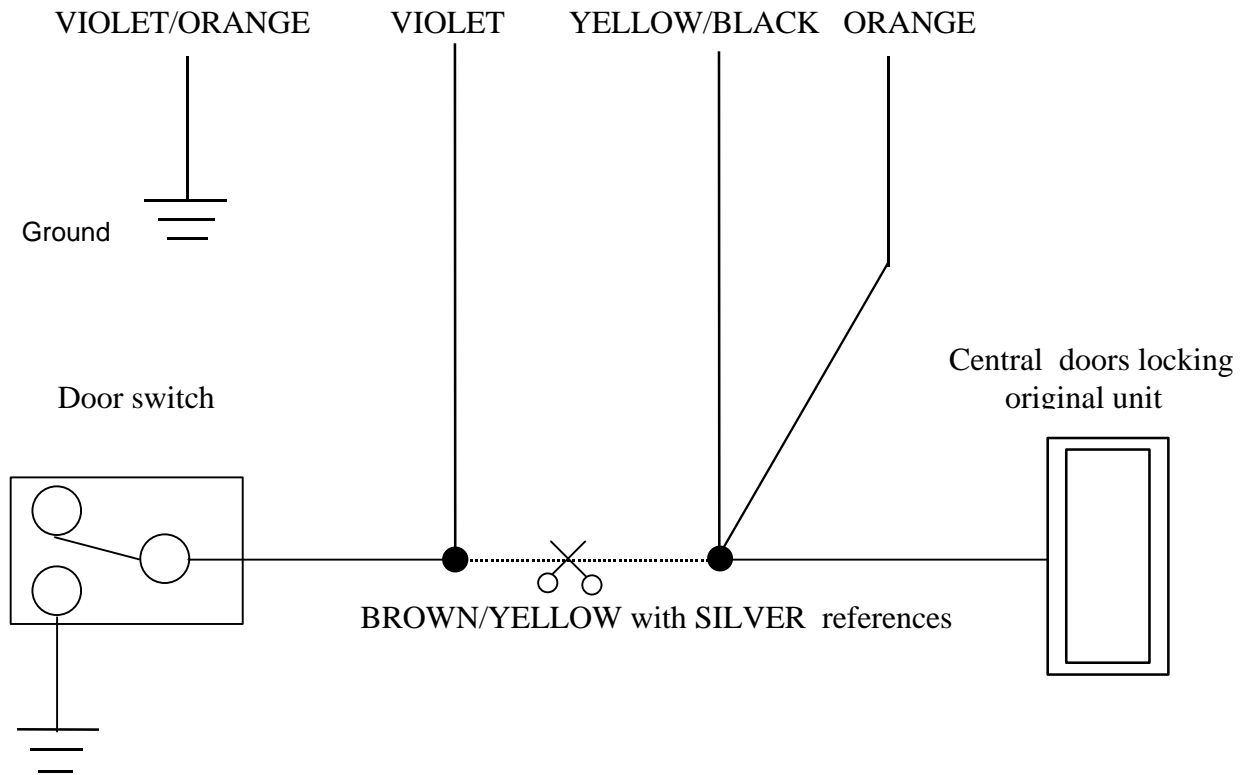

The wire mentioned above is located in the wiring harness coming out of the connector of the driver's side door.



CAR SECURITY


SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

www.cobra.it

FITTING DIAGRAM N°70A

Diagram to make the central doors locking on  
**SUZUKI JIMNY mod. 2000**  
(for 3100 serie antithefts)

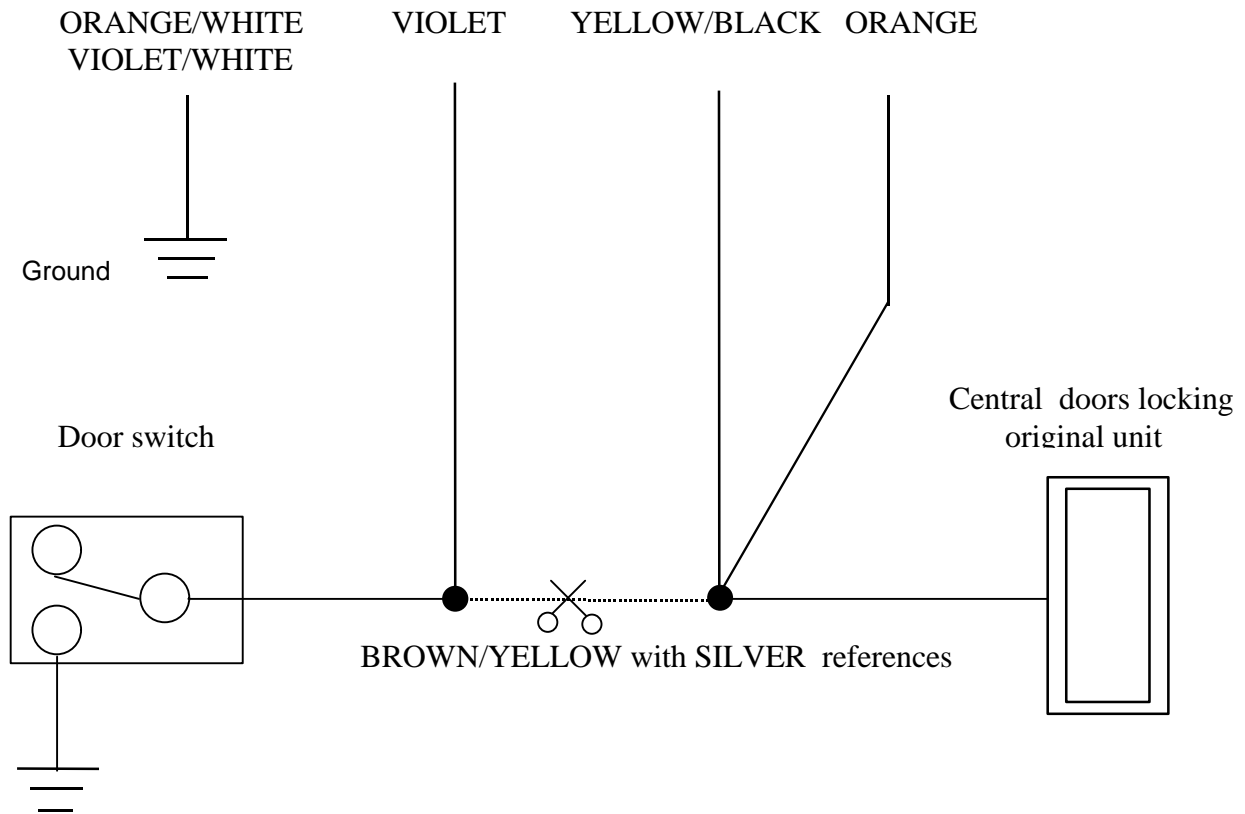

The wire mentioned above is located in the wiring harness coming out of the connector of the driver's side door.