



CAR SECURITY

SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

www.cobra.it

MAKE

SUZUKI

MOD.

VITARA

YEAR

93 →

PETROL
DIESEL

ALARM/SIREN POSITION

Position the compact alarms and the sirens in the engine compartment, on the panel of the left lateral shock absorber.

POWER SUPPLY

+ **30**: connect to the ground terminal at the entrance of the fuse box.
- **31**: connect directly to the car body.

IGNITION WIRE

+15/54: find the positive ignition wire verifying its presence also during the engine firing.

DIRECTION INDICATORS

Connect to the GREEN/RED and GREEN/YELLOW wires located in the wiring harness coming out of the 20 way light blue connector, on the left of the steering column, under the dashboard, driver's side.

ELECTRIC WINDOWS

Positive control signal
Front window, driver's side:
cut the 1,5 mm² YELLOW wire.
Front window, passenger's side:
cut the 1,5 mm² GREEN/BLACK wire.
The wires are located in the wiring harness coming out of the respective switches.

CENTRAL DOORS LOCKING

Negative control signal
Connect to the 1 mm² PINK wire with GREY references (lock) and to the PINK/BLACK wire with GREY references (unlock) located in the wiring harness coming out of the driver's side door.

IMMOBILISATION POINT

Fuel pump
Cut the 1,5 mm² BLACK/WHITE wire with BROWN references located in the wiring harness coming out of the green fuel pump relay on the left of the steering column, under the dashboard, driver's side.

BONNET SWITCH

Install an additional switch on the headlamp support plate, near the original rubber bonnet stop.

DOORS SWITCH

Connect to the 1 mm² BLACK/RED wire located in the wiring harness coming out of the 20 way light blue connector, on the left of the steering column, under the dashboard, driver's side.