

## SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

**REV. 00** 

www.cobra.it

TOYOTA **MAKE** 

MOD

**AVENSIS** 

YFAR

PETROL DIESEL

X

ALARM/SIREN **POSITION** 

Position the compact alarms and the sirens on the support of the shock absorber,

passenger's side.

**CENTRAL UNIT POSITION** 

Position the modular sistems and the modules under the dashboard, driver's side.

**POWER SUPPLY** 

+30: connect to the WHITE wire, in the second free slot of the fuse box. Add a 25Amp fuse.

-31: connect to a ground terminal located behind the left lateral bulkhead, driver's side.

**IGNITION WIRE** 

+15/54: connect to the BLACK/RED wire, in the light blue connector located behind the fuse

**DIRECTION INDICATORS** 

Connect to the GREEN/WHITE and GREEN/YELLOW wires in the black connector of the

direction indicators grey relay located behind the fuse box.

**ELECTRIC WINDOWS** 

Positive control signal

Front window, driver's side:

cut the GREEN wire in the connector directly coming out of the driver's side window motor.

Front window, passenger's side:

cut the GREEN/WHITE wire, at the position nr.13, in the 13 way white connector, behind the

driver's side bulkhead.

Rear window, driver's side:

cut the GREEN/BLACK wire, at the position nr.9, in the 13 way white connector, behind the

driver's side bulkhead.

Rear window, passenger's side:

cut the GREEN/YELLOW wire, at the position nr.11, in the 13 way white connector, behind the

driver's side bulkhead.

CENTRAL DOORS LOCKING Negative control signal

Connect to the BROWN/WHITE wire (lock) and to the GREEN/WHITE wire (unlock), in the 24

way white connector behind the driver's side sill cover.

**IMMOBILISATION POINT** 

Fuel pump

Cut the GREEN/YELLOW wire, at the position nr.6, in the 10 way connector located behind

the driver's side sill cover.

**STARTER** 

+50: Cut the BLACK wire coming out of the 10 way white connector, located behind the

passenger's side glove compartment.

**BONNET SWITCH** 

Install an additional switch on the headlamp support plate, driver's side.

**DOORS SWITCH** 

Connect to the RED wire, at the position nr.4 in the driver's side door, and to the WHITE/GREEN wire, at the position nr. 14 in the rear doors, in the 18 way white connector, behind the driver's side sill cover; connect to the RED wire at the position nr.9, in the

passenger side door, in the grey connector on the fuse box.

**BOOT SWITCH** 

Connect to the RED/YELLOW wire in the wiring harness located in the sill cover of the driver's

side door.