



SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

www.cobra.it

MAKE **TOYOTA** MOD. **AVENSIS*** YEAR **03** →
 PETROL
 DIESEL

* Models with original equipment keyless entry system.

- ALARM/SIREN POSITION** Position the compact alarms and the sirens on the support of the shock absorber, passenger's side.
- CENTRAL UNIT POSITION** Position the modular systems and the modules under the dashboard.
- POWER SUPPLY**
 +30: connect to the WHITE wire, in the second free slot of the fuse box. Add a 25Amp fuse.
-31: connect to a ground terminal located behind the driver's side sill cover.
- IGNITION WIRE** **+15/54:** connect to the BLACK/RED wire in the light blue connector, located behind the fuse box.
- DIRECTION INDICATORS** Connect to the GREEN/WHITE and GREEN/YELLOW wires in the black connector of the direction indicators grey relay located behind the fuse box.
- ELECTRIC WINDOWS**
Positive control signal
Front window, driver's side:
 cut the GREEN wire in the connector directly coming out of the driver's side window motor.
Front window, passenger's side:
 cut the GREEN/WHITE wire, at the position nr.13, in the 13 way white connector, behind the driver's side bulkhead.
Rear window, driver's side:
 cut the GREEN/BLACK wire, at the position nr.9, in the 13 way white connector, behind the driver's side bulkhead.
Rear window, passenger's side:
 cut the GREEN/YELLOW wire, at the position nr.11, in the 13 way white connector, behind the driver's side bulkhead.
- ACTIVAT./DEACTIVATION CONTROLS**
Connections antitheft/vehicle Art.3800
- | Vehicle | Position | |
|--------------|--------------|---|
| YELLOW/BLACK | BLUE/RED | Pos. nr.7 in the 17 way white connector |
| GREY/BLACK | BLUE/BLACK | Pos. nr.2 in the 17 way white connector |
| VIOLET | GREEN/YELLOW | In the black connector of the grey direct. indic. relay |
| ORANGE | ground | car body |
| VIOLET/WHITE | ground | car body |
| ORANGE/WHITE | ground | car body |
- The 17 way white connector is located behind the driver's side sill cover. The black connector of the direction indicators relay is located behind the fuse box.
 Refer to the **fitting diagram nr.190**.
- IMMOBILISATION POINT**
Gasoil pump
 Cut the YELLOW wire, at the position nr.4, coming out of the connector behind the instrument panel.
- STARTER** **+50:** Cut the BLACK wire coming out of the 10 way white connector, located behind the passenger's side glove compartment.
- BONNET SWITCH** Install an additional switch on the headlamp support plate, driver's side.
- DOORS SWITCH** Connect to the RED wire at the position nr.4 in the driver's side door, and to the WHITE/GREEN wire at the position nr. 14, in the 18 way white connector located behind the driver's side sill cover for the rear doors; connect to the RED wire at the position nr.9, in the grey connector on the fuse box, for the passenger's side. Divide the line with diodes 1N4004.
- BOOT SWITCH** Connect to the RED/YELLOW wire located in the wiring harness, in the rear part of the driver's side sill cover.

FITTING DIAGRAM NR.190

