



## CAR SECURITY

### SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

[www.cobra.it](http://www.cobra.it)

MAKE **TOYOTA** MOD. **AVENSIS VERSO** YEAR **02** → PETROL  DIESEL

|                              |  |
|------------------------------|--|
| <b>ALARM/SIREN POSITION</b>  | Position the compact alarms and the sirens on the wheelhouse, passenger's side.  |
| <b>CENTRAL UNIT POSITION</b> | The modular systems and the modules should be positioned under the dashboard, driver's side.   |
| <b>POWER SUPPLY</b>          | <b>+30:</b> connect to the WHITE/RED wire located in the 6 way blue connector, in the fuse box.<br><b>-31:</b> connect with a ground terminal located behind the driver's side bulkhead.   |
| <b>IGNITION WIRE</b>         | <b>+15/54:</b> connect to the BLUE/RED wire located in the white connector, in the fuse box, above the fuses.  |
| <b>DIRECTION INDICATORS</b>  | Connect to the LIGHT BLUE wires at the positions nr. 2 and nr. 3, in the 9 way connector, on the relay of the direction indicators on the left of the steering column.   |
| <b>ELECTRIC WINDOWS</b>      | <b>Negative control signal</b><br><b>Front window, driver's side:</b><br>cut the RED wire at the pos. nr. 1, in the 20 way white connector, in the driver's side push-buttons panel.<br><b>Front window, passenger's side:</b><br>cut the RED wire at the pos. nr. 6, in the 12 way white connector, in the passenger's side push-buttons panel.<br><b>Rear window, driver's side:</b><br>cut the RED wire at the position nr. 6, in the 12 way white connector, in the driver's side push-buttons panel.<br><b>Rear window, passenger's side:</b><br>cut the RED wire at the position nr. 6, in the 12 way white connector, in the passenger's side push-buttons panel. |
| <b>CENTRAL DOORS LOCKING</b> | <b>Negative control signal</b><br>Connect to the BLUE/RED wire at the pos. nr. 1 (lock) and to the BLACK/WHITE wire at the pos. nr. 18 (unlock) located in the 18 way white connector, behind the driver's side sill cover.<br>As alternative:<br><b>Direct motor control</b><br>Cut the BLACK/WHITE wire at the pos. nr. 4, in the 9 way grey connector, in the fuse box (lock); cut the BLUE/WHITE wire at the pos. nr. 1 in the 9 way grey connector, in the fuse box (unlock).   |
| <b>IMMOBILISATION POINT</b>  | <b>Fuel pump</b><br>Cut the BLUE/BLACK wire with SILVER references, at the pos. nr. 5, of the 13 way blue connector located behind the left lateral bulkhead, driver's side.   |
| <b>STARTER</b>               | <b>+50:</b> Cut the 1,5 mm <sup>2</sup> RED wire located in the wiring harness coming out of the connector of the ignition key.  |
| <b>BONNET SWITCH</b>         | Install an additional switch on the headlamp support plate, driver's side.   |
| <b>DOORS AND BOOT SWITCH</b> | connect to the RED/WHITE wire at the position nr. 1, in the 34 way connector, in the front part of the fuse box.   |