



SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00


www.cobra.it

MAKE **TOYOTA** MOD. **COROLLA*** YEAR **03** → PETROL DIESEL
COROLLA SW*

* Models with original equipment keyless entry system.

ALARM/SIREN POSITION	Position the compact alarms and the sirens on the passenger's side wheel house.																					
CENTRAL UNIT POSITION	Position the modular systems and the modules under the dashboard, on the left of the steering column.																					
POWER SUPPLY	+30: connect to the 6mm ² WHITE wire located in the white connector, in the central part of the fuse box. -31: connect to a ground terminal located behind the driver's side sill cover.																					
IGNITION WIRE	+15/54: connect to the WHITE/BLACK wire, at the pos. nr. 5, in the 6 way black connector, in the fuse box.																					
DIRECTION INDICATORS	Connect to the GREEN/YELLOW wire, at the position nr. 6, and to the GREEN/BLACK wire at the position nr. 11, in the 24 way white connector, in the fuse box.																					
ELECTRIC WINDOWS	Positive control signal Refer to the fitting diagram nr. 195 .																					
ACTIVAT./DEACTIVATION CONTROLS	Connections antitheft/vehicle <table border="0" style="width: 100%;"> <thead> <tr> <th style="text-align: left;">Art.3800</th> <th style="text-align: left;">Vehicle</th> <th style="text-align: left;">Position</th> </tr> </thead> <tbody> <tr> <td>YELLOW/BLACK</td> <td>RED</td> <td>Pos. nr.8, 12 way white connector</td> </tr> <tr> <td>GREY/BLACK</td> <td>BLUE</td> <td>Pos. nr.9, 12 way white connector</td> </tr> <tr> <td>VIOLET</td> <td>GREEN/YELLOW</td> <td>Pos. nr.6, 24 way white connector</td> </tr> <tr> <td>ORANGE</td> <td>ground</td> <td>car body</td> </tr> <tr> <td>VIOLET/WHITE</td> <td>ground</td> <td>car body</td> </tr> <tr> <td>ORANGE/WHITE</td> <td>ground</td> <td>car body</td> </tr> </tbody> </table> <p>The 12 way white connector and the 24 way white connector are located behind the driver's side sill cover. Refer to the fitting diagram nr.191.</p>	Art.3800	Vehicle	Position	YELLOW/BLACK	RED	Pos. nr.8, 12 way white connector	GREY/BLACK	BLUE	Pos. nr.9, 12 way white connector	VIOLET	GREEN/YELLOW	Pos. nr.6, 24 way white connector	ORANGE	ground	car body	VIOLET/WHITE	ground	car body	ORANGE/WHITE	ground	car body
Art.3800	Vehicle	Position																				
YELLOW/BLACK	RED	Pos. nr.8, 12 way white connector																				
GREY/BLACK	BLUE	Pos. nr.9, 12 way white connector																				
VIOLET	GREEN/YELLOW	Pos. nr.6, 24 way white connector																				
ORANGE	ground	car body																				
VIOLET/WHITE	ground	car body																				
ORANGE/WHITE	ground	car body																				
IMMOBILISATION POINT	Fuel pump Cut the BLACK/RED wire, at the position nr. 10, in the 24 way white connector, in the fuses box.																					
STARTER	+50: cut the 4mm ² BLACK/WHITE wire, at the pos. nr. 4, in the 18 way white connector, behind the passenger's side glove compartment.																					
BONNET SWITCH	Install an additional switch on the headlamp support plate, driver's side.																					
DOORS AND BOOT SWITCH	Connect to the RED/BLACK wire, at the position nr. 17, in the 24 way white connector, in the fuse box.																					

FITTING DIAGRAM NR.191

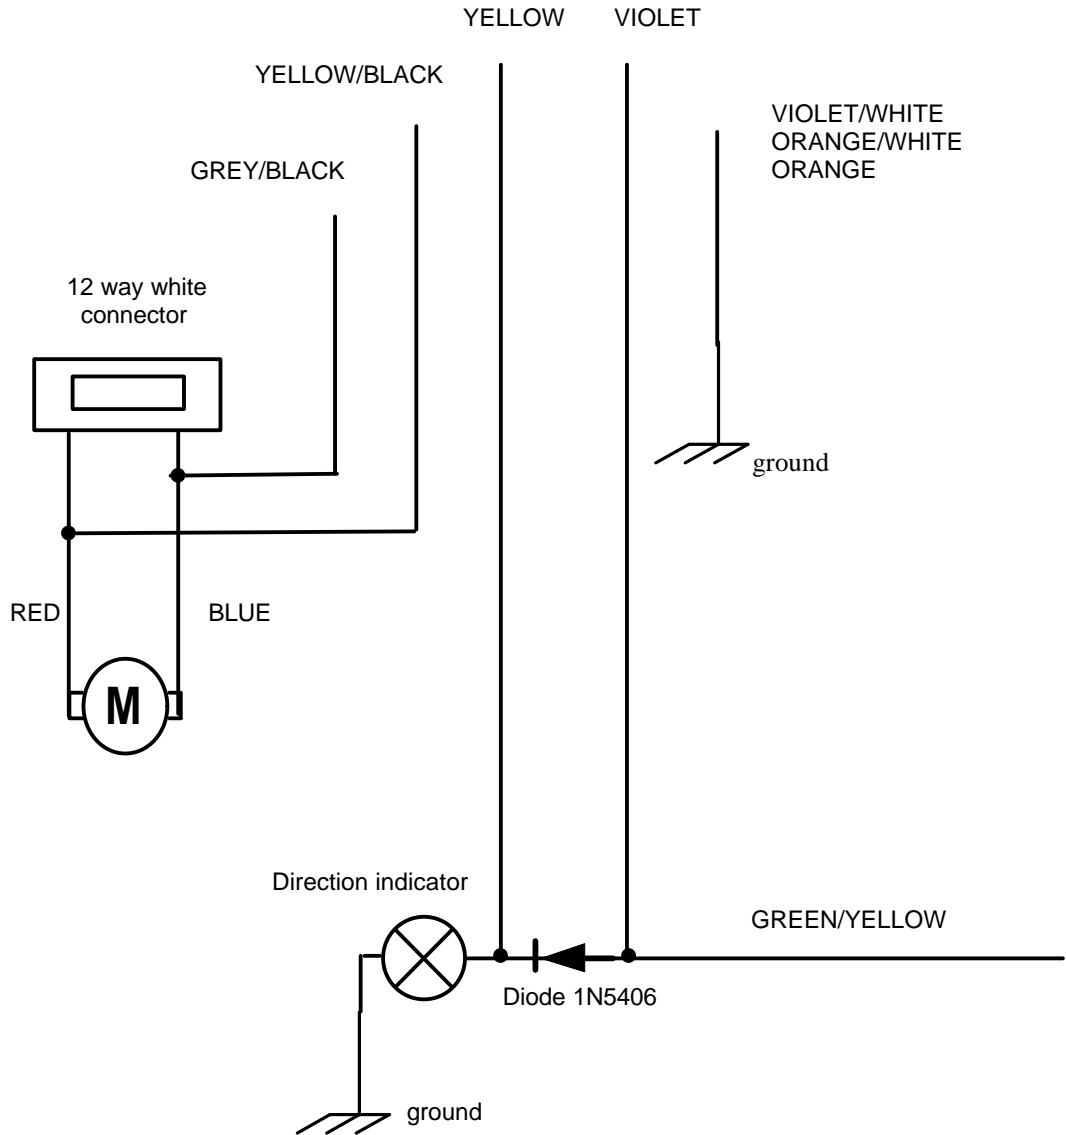

FITTING DIAGRAM NR. 195

Diagram to make the windows locking with automatism

