



SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

www.cobra.it

MAKE **TOYOTA** MOD. **COROLLA** YEAR **03** → PETROL
COROLLA SW DIESEL

ALARM/SIREN POSITION	Position the compact alarms and the sirens on the passenger's side wheel house.
CENTRAL UNIT POSITION	Position the modular systems and the modules under the dashboard, on the left of the steering column.
POWER SUPPLY	+30: connect to the 6mm ² WHITE wire located in the white connector, in the central part of the fuse box. -31: connect to an original ground terminal located behind the driver's side bulkhead.
IGNITION WIRE	+15/54: connect to the BLACK/ORANGE wire, at the pos. nr. 10, in the 10 way yellow connector, in the fuse box.
DIRECTION INDICATORS	Connect to the GREEN/YELLOW wire, at the position nr. 6, and to the GREEN/BLACK wire at the position nr. 11, in the 24 way white connector, in the fuse box.
ELECTRIC WINDOWS	Positive control signal Refer to the fitting diagram nr. 195 .
CENTRAL DOORS LOCKING	Negative control signal Connect to the GREEN/YELLOW wire, at the position nr. 5 (lock), and to the BLUE/RED wire, at the position nr. 4 (unlock), in the 12 way white connector, behind the driver's side sill cover.
IMMOBILISATION POINT	Gasoil pump Cut the BLACK/ORANGE wire, at the position nr. 4, in the 18 way white connector, behind the passenger's side glove compartment.
STARTER	+50: cut the 4mm ² BLACK wire, at the pos. nr. 7, in the 10 way grey connector, behind the passenger's side glove compartment.
BONNET SWITCH	Install an additional switch on the headlamp support plate, driver's side.
DOORS AND BOOT SWITCH	Connect to the RED/BLACK wire, at the position nr. 17, in the 24 way white connector, in the fuse box.
ODOMETER	Connect to the VIOLET/WHITE wire, in the 28 way white connector, on the central behind the passenger's side glove compartment.

Diagram to make the windows locking with automatism

