

SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

www.cobra.it

Models with original equipment keyless entry system.

ALARM/SIREN POSITION

Position the compact alarms and the sirens on the passenger's side wheel house.

CENTRAL UNIT POSITION Position the modular systems and the modules under the dashboard, on the left of the steering column.

POWER SUPPLY +30: connect to the WHITE wire located in the 1 way white connector, in the central part of the fuse

box.

-31: connect to a ground terminal located behind the driver's side left lateral bulkhead.

IGNITION WIRE +15/54: connect to the WHITE/BLACK wire, at the pos. nr.5, in the 6 way black connector, in the fuse

box.

DIRECTION INDICATORS Connect to the GREEN/YELLOW wire, at the position nr. 6, and to the GREEN/BLACK wire at the

position nr. 11, in the 24 way white connector, in the fuse box.

ELECTRIC WINDOWS Version with "Sol" equipment

It is not possible to make the connection of the electric windows as the windows central units lose the

programming.

Version with "Base" equipment

To make the windows locking it is sufficient to disconnect the positive rising of each push-button located in the wiring harness coming out of the push-button panel, directly inside the driver's side door.

ACTIVAT./DEACTIVATION Connections antitheft/vehicle

CONTROLS Art.3800 Vehicle Position

YELLOW/BLACK RED Pos. nr.8, 12 way blue connector GREY/BLACK BLUE Pos. nr.9, 12 way blue connector VIOLET GREEN/YELLOW Pos. nr.6, 24 way white connector

ORANGE ground car body VIOLET/WHITE ground car body ORANGE/WHITE ground car body

The 12 way blue connector is located behind the driver's side sill cover. The 24 way white connector is

located directly in the fuse box. Refer to the fitting diagram nr.191.

IMMOBILISATION POINT Gasoil pump

Cut the BLACK/WHITE wire, at the position nr. 4, in the 18 way white connector, behind the

passenger's side glove compartment.

STARTER +50: cut the BLACK wire, at the pos. nr. 7, in the 10 way grey connector, behind the passenger's side

glove compartment.

BONNET SWITCH Install an additional switch on the headlamp support plate, driver's side.

DOORS AND BOOT SWITCH Connect to the RED/YELLOW wire, at the position nr. 17, in the 24 way white connector, in the fuse

box.



VEHICLE SECURITY

SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

www.cobra.it

FITTING DIAGRAM NR.191

