



SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

www.cobra.it

MAKE **TOYOTA** MOD. **LAND CRUISER** YEAR **03** → PETROL
DIESEL

ALARM/SIREN POSITION	Position the compact alarms and the sirens on the support of the shock absorber, driver's side.
CENTRAL UNIT POSITION	Position the modular systems and the modules under the dashboard, on the left of the steering column, near the fuse box.
POWER SUPPLY	+30: connect to the BLUE/WHITE wire, in the 2 way connector, located in the middle of the fuse box, on the left of the steering column. -31: connect to a ground terminal located behind the driver's side bulkhead.
IGNITION WIRE	+15/54: connect to the BLUE/YELLOW wire, in the 2 way connector, located in the middle of the fuse box, on the left of the steering column.
DIRECTION INDICATORS	Connect to the BLUE/BLACK and BLUE/YELLOW wires, in the 16 way black connector, in the left part of the fuse box. As alternative: connect to the BLUE/BLACK and BLUE/YELLOW wires, in the 4 way white connector, behind the fuse box.
ELECTRIC WINDOWS	It is not possible to make the connection of the electric windows as the windows central units lose the programming.
CENTRAL DOORS LOCKING	Negative control signal Connect to the BLUE wire (lock) and to the GREEN wire (unlock) in the connector coming out of the unlock/lock push-button on the driver's side door.
IMMOBILISATION POINT	Gasoil pump Cut the WHITE/GREEN wire, at the position nr.7, in the 22 way connector on the central located behind the passenger's side glove compartment.
STARTER	+50: Cut the GREEN wire, at the position nr.8, in the 8 way white connector coming out of the ignition key.
BONNET SWITCH	Install an additional switch on the headlamp support plate.
DOORS SWITCH	Connect to the wires: WHITE/GREEN, RED/YELLOW, WHITE/GREEN, RED/YELLOW in the 22 way white connector, on the side of the fuse box. Divide the lines with 4 diodes 1N4004.
BOOT SWITCH	Connect to the RED/BLUE wire, in the 22 way white connector, on the side of the fuse box