



CAR SECURITY

SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

www.cobra.it

MAKE **TOYOTA** MOD. **LAND CRUISER 90*** YEAR. **01** → PETROL DIESEL

* Models with original equipment keyless entry system.

ALARM/SIREN POSITION Position the compact alarms and the sirens in the engine compartment, on the support of the wing.

CENTRAL UNIT POSITION Position the modular systems and the modules under the dashboard, driver's side.

POWER SUPPLY
+ **30**: connect to the WHITE/ RED wire located in the wiring harness coming out of the connector of the ignition key.
- **31**: connect directly to the car body.

IGNITION WIRE + **15/54**: connect to the 1,5mm² YELLOW/BLACK wire located in the wiring harness coming out of the connector of the ignition key.

DIRECTION INDICATORS Connect to the GREEN/BLACK wire located in the bundle of cables behind the fuse box and to the GREEN/YELLOW wire located in the wiring harness coming out of the white connector placed behind the driver's side sill cover.

ELECTRIC WINDOWS
Positive control signal
Front window, driver's side:
Cut the RED wire with SILVER references located in the wiring harness coming out of the serial switch directly inside the driver's side door.
Front window, passenger's side:
Cut the BLACK wire located in the wiring harness coming out of the 16 way blue connector placed behind the left lateral bulkhead, driver's side.

ACTIVAT./DEACTIVATION CONTROLS
Connections antitheft/vehicle

38XX	Vehicle	Position
YELLOW/BLACK	BLUE/BLACK	20 way connector
GREY/BLACK	BLUE/RED	20 way connector
VIOLET	BLUE/YELLOW	20 way connector
ORANGE	BLUE/WHITE	20 way connector
VIOLET/WHITE	ground	car body
ORANGE/WHITE	+30	positive, fuse box

All these connections must be done in the wiring harness coming out of the 20 way connector located in the fuse box.

IMMOBILISATION POINT 1 **Gasoil pump**
Cut the YELLOW/BLACK wire located in the wiring harness coming out of the connector of the ignition key.

IMMOBILISATION POINT 2 **Under lock driving**
Cut the BLACK/ORANGE wire with SILVER references located in the wiring harness coming out of the 11 way light brown connector, placed down, behind the fuse box.

STARTER + **50**: Cut the WHITE/BLACK wire located in the wiring harness coming out of the 8 way white connector of the ignition key.

BONNET SWITCH Install an additional switch on the front headlamp support plate, driver's side.

DOORS AND BOOT SWITCH Connect to the RED/BLACK wire located in the wiring harness coming out of the serial switch.