



## CAR SECURITY

### SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

[www.cobra.it](http://www.cobra.it)

MAKE

**TOYOTA**

MOD.

**LAND CRUISER**

YEAR

**97** →

PETROL   
DIESEL

#### ALARM/SIREN POSITION

Position the compact alarms and the sirens in the engine compartment, on the wheelhouse, passengers side. Position the modular systems and the modules under the dashboard, drivers side.

#### POWER SUPPLY

+ **30**: connect to the 3 mm<sup>2</sup> RED wire located at the entrance of the fuse box.  
- **31**: connect with a ring terminal to one of the terminals coming out of the original power supply behind the left lateral panel.

#### IGNITION WIRE

+ **15/54**: connect to the 2 mm<sup>2</sup> BLACK wire located in the wiring harness coming out of the connector of the ignition key.

#### DIRECTION INDICATORS

Connect to the 1 mm<sup>2</sup> GREEN/YELLOW wires with RED reference and GREEN/WHITE with RED reference located in the wiring harness coming out of the multiway connector along the steering column.

#### CENTRAL DOORS LOCKING

##### Negative control signal

Connect to the 1 mm<sup>2</sup> RED/WHITE wires with BLUE reference (unlock) and RED/BLACK with BLUE reference (lock) located in the coming out of the original switch on the handrest of the front door, drivers side.

#### IMMOBILISATION POINT

##### Gasoil pump

Cut the BLACK/YELLOW wire that drives the electrovalve of the injection pump.

#### BONNET SWITCH

Install an additional switch on the front headlamp support plate, near the original bonnet stop rubber.

#### DOORS SWITCH

Connect to the wire coming out of the original switch.