



## CAR SECURITY

### SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

www.cobra.it

MAKE

**TOYOTA**

MOD.

**PIC-NIC**

YEAR

**97** →

PETROL   
DIESEL

#### ALARM/SIREN POSITION

Position the compact alarms and the sirens on the member between the battery and the headlamps set.

Install the modular systems and the modules under the left dashboard, driver's side. Pass the cables using the core hitch behind the wing cover, driver's side.

#### POWER SUPPLY

**+ 30:** connect to the 4 mm<sup>2</sup> RED/WHITE wire located in a multiway connector at the entrance of the fuse box.

**- 31:** connect with a cable terminal directly to the car body.

#### IGNITION WIRE

**+ 15/54:** connect to the 1,5 mm<sup>2</sup> LIGHT BLUE wire located in the wiring harness coming out of the 11 way white connector, above the fuse box.

#### DIRECTION INDICATORS

Connect to the 1 mm<sup>2</sup> GREEN/BLACK and GREEN/YELLOW wires located in the wiring harness coming out of the 7 way white connector, above the fuse box.

#### ELECTRIC WINDOWS

##### Positive control signal

##### Front window, driver's side:

cut the 1,5 mm<sup>2</sup> RED wire directly on the door.

##### Front window, passenger's side:

cut the 1,5 mm<sup>2</sup> GREEN/WHITE wire.

##### Rear window, driver's side:

cut the 1,5 mm<sup>2</sup> GREEN/YELLOW wire.

##### Rear window, passenger's side:

cut the 1,5 mm<sup>2</sup> GREEN/RED wire.

The connections are made in the wiring harness coming out of the 11 way connector located behind the lateral panel, driver's side.

#### CENTRAL DOORS LOCKING

##### Negative control signal

Connect to the 1 mm<sup>2</sup> GREEN/ORANGE wire (lock) and to the BLUE/YELLOW wire (unlock) located in the wiring harness coming out of the central doors locking unit. The central unit is near the fuse box.

#### IMMOBILISATION POINT 1

##### Fuel pump

Cut the 1 mm<sup>2</sup> BLUE/BLACK wire located in the bundle of cables under the left sill cover, driver's side.

#### IMMOBILISATION POINT 2

##### Central unit cut

Cut the 1,5 mm<sup>2</sup> BLACK/ORANGE wire located in the wiring harness coming out of the 9 way white connector, above the fuse box.

#### STARTER

**+50:** Cut the 2 mm<sup>2</sup> RED wire located in the wiring harness coming out of the connector of the ignition key.

#### BONNET SWITCH

Install an additional switch on the left of the headlamp support plate, near the original rubber bonnet stop.

#### DOORS AND BOOT SWITCH

connect to the 1 mm<sup>2</sup> RED/WHITE wire located in the wiring harness, under the left sill cover, driver's side.