



CAR SECURITY

SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

www.cobra.it

MAKE

TOYOTA

MOD.

RAV 4 *

YEAR

02 →

PETROL
DIESEL

* Models with original equipment keyless entry system.

ALARM/SIREN POSITION

Position the compact alarms and the sirens on the driver's side wheel house using the original rubber core hitch.

CENTRAL UNIT POSITION

Install the modular systems and the modules under the dashboard, driver's side.

POWER SUPPLY

+30: connect to the 4 mm² BLACK/RED wire located in a multiway connector, in the fuse box.
- 31: connect to an original ground terminal located behind the driver's side bulkhead.

IGNITION WIRE

+15/54: connect to the RED/BLUE wire in the 8 way white connector, on the right of the fuse box.

DIRECTION INDICATORS

Connect to the GREEN/YELLOW wire at the position nr. 8 and to the GREEN/BLACK wire at the position nr. 4, in the 32 way white connector, in the fuse box.

ELECTRIC WINDOWS

Positive control signal

Front window, driver's side:

cut the YELLOW wire, at the position nr. 4, on the 18 way connector of the push-button panel, in the driver's side door.

Front window, passenger's side:

cut the GREEN/RED wire, at the position nr.3, in the 13 way connector, behind the driver's side sill cover.

Rear window, driver's side:

cut the BLUE/BLACK wire, at the position nr.12, in the 13 way white connector, behind the driver's side sill cover.

Rear window, passenger's side:

cut the RED/YELLOW wire, at the position nr. 10, in the 13 way white connector behind the driver's side sill cover.

ACTIVAT./DEACTIVATION CONTROLS

Connections antitheft/vehicle

Art. 3800

YELLOW/BLACK

Vehicle

BLUE/ORANGE

Position

Pos.nr. 2, 13 way white connector

GREY/BLACK

BLUE/RED

Pos.nr. 7, 13 way white connector

VIOLET

BLUE

Pos.nr. 4, 14 way white connector

BLUE/WHITE

Pos.nr.12, 14 way white connector

ORANGE

BLUE/ORANGE

Pos.nr. 6, 14 way white connector

BLUE/YELLOW

all the above in the driver's side sillcover.

VIOLET/WHITE

ground

Pos.nr.13 white conn., driver's side door.

ORANGE/WHITE

positive

car body

Positive supply in the fuse box

Refer to the **diagram nr.156.**

IMMOBILISATION POINT

Fuel pump

Cut the 1,5 mm² BLUE/BLACK wire located in the 16 way white connector with black hook, in the driver's side sill cover.

STARTER

+50: Cut the 2,5 mm² RED wire located in the wiring harness coming out of the ignition key.

BONNET SWITCH

Install an additional switch on the headlamp support plate, driver's side.

DOORS AND BOOT SWITCH

connect to the RED/BLACK wire, at the position nr. 1, in the 10 way connector, on the central unit placed behind the passenger's side glove compartment.



CAR SECURITY

SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

www.cobra.it

FITTING DIAGRAM N°156

Diagram to connect art. 3800 on
TOYOTA RAV 4 year 2002

