



## SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

**REV. 00**

[www.cobra.it](http://www.cobra.it)

MAKE **TOYOTA** MOD. **RAV 4\*** YEAR **03** → PETROL  DIESEL

\* Models with original equipment keyless entry system.

**ALARM/SIREN POSITION** Position the compact alarms and the sirens on the driver's side wheel house using the original rubber core hitch.

**CENTRAL UNIT POSITION** Install the modular systems and the modules under the dashboard, driver's side.

**POWER SUPPLY** **+30:** connect to the 4 mm<sup>2</sup> BLACK/RED wire located in a multiway connector, in the fuse box.  
**- 31:** connect to an original ground terminal located behind the driver's side bulkhead.

**IGNITION WIRE** **+15/54:** connect to the RED/BLUE wire, in the 8 way white connector, on the right of the fuse box.

**DIRECTION INDICATORS** Connect to the GREEN/YELLOW wire at the position nr. 8 and to the GREEN/BLACK wire at the position nr. 4, in the 32 way white connector, in the fuse box.

**ELECTRIC WINDOWS**

**Positive control signal**

**Front window, driver's side:**  
 cut the YELLOW wire, at the position nr. 4, on the 18 way connector of the push-button panel, in the driver's side door.

**Front window, passenger's side:**  
 cut the GREEN/RED wire, at the position nr.13, in the 13 way connector, behind the driver's side sill cover.

**Rear window, driver's side:**  
 cut the BLUE/BLACK wire, at the position nr.12, in the 13 way white connector, behind the driver's side sill cover.

**Rear window, passenger's side:**  
 cut the RED/YELLOW wire, at the position nr. 10, in the 13 way white connector, behind the driver's side sill cover.

**ACTIVAT./DEACTIVATION CONTROLS**

**Connections antitheft/vehicle**

Art.3800	Vehicle	Position
YELLOW/BLACK	BLUE/ORANGE	Pos. nr.2 in the 13 way white connector
GREY/BLACK	BLUE/RED	Pos. nr.7 in the 13 way white connector
VIOLET	GREEN/YELLOW	Pos. nr.8 in the 32 way white connector
ORANGE	ground	car body
VIOLET/WHITE	ground	car body
ORANGE/WHITE	ground	car body

The 13 way white connector is located behind the driver's side sill cover; the 32 way white connector is located in the fuse box. Refer to the **fitting diagram nr.192**.

**IMMOBILISATION POINT** **Fuel pump**  
 Cut the 1,5 mm<sup>2</sup> BLUE/BLACK wire located in the 16 way white connector with black hook, in the driver's side sill cover.

**STARTER** **+50:** Cut the 2,5 mm<sup>2</sup> RED wire located in the wiring harness coming out of the ignition key.

**BONNET SWITCH** Install an additional switch on the headlamp support plate, driver's side.

**DOORS AND BOOT SWITCH** connect to the RED/BLACK wire, at the position nr. 1, in the 10 way connector, on the central unit placed behind the passenger's side glove compartment.

**FITTING DIAGRAM NR. 192**

