

CAR SECURITY

SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 02

SFECIF	IC VEHICLE ALARMI FITTING INSTRUCTIONS REV. 02
MAKE VOLKSWA	
* Models with original equipment keyless entry system.	
ALARM/SIREN POSITION	Position the modular system and the siren in the engine compartment, on the bulkhead between the engine compartment and the cabin. Run the cables through the available rubber plug located under the brake fluid reservoir.
CENTRAL UNIT POSITION	Position the modular systems and the modules under the dashboard on the driver's side. Alternatively, behind the left-side bulkhead on the driver's side.
POWER SUPPLY	 + 30: connect with an eyelet terminal to the pin marked "+30" of the terminal strip located on the lower part of the fuse box. - 31: connect with an eyelet terminal on the grounding shunt up on the left of the fuse box.
IGNITION WIRE	Connect to the 2 mm ² BLACK wire in the central area of the fuse box located on the left-side bulkhead on the driver's side.
DIRECTION INDICATORS	Connect to the BLACK/WHITE wire, at the position nr. 14 and to the BLACK/ GREEN wire, at the position nr.15, of the 15 way brown connector, on the central under the dashboard, on the left of the steering column.
ELECTRIC WINDOWS	Comfort locking Temporize to 24s the YELLOW/BLUE wire located in the horizontal wiring harness, inside the driver's side door or, as alternative, connect to the YELLOW/BLUE wire, at the position nr. 24, in the 29 way connector, on the central of the window motor.
ACTIVAT./DEACTIVATION CONTROLS	Connections antithefts/vehicle Refer to the diagram nr.135.
IMMOBILISATION POINT	Fuel pump Cut the 1 mm ² BLUE/YELLOW wire in the wiring harness that comes out of the 6 way light brown connector located on the connector plate under the dashboard, on the driver's side.
STARTER	+50: Cut the 1 mm ² RED/VIOLET wire that comes off the fuse marked nr. 32, located in the fuse box, above the left lateral bulkhead on the driver's side.
BONNET SWITCH	Install an additional switch on the headlamp support grill, up on the left of the headlamp on the driver's side.
DOORS SWITCH	Connect to the 1 mm ² GREY/BLUE wire, at the position nr. 21 of the 23 way light blue connector that comes out of the central located under the dashboard, on the left of the steering column.
BOOT SWITCH	Connect to the BROWN/BLACK wire, at the position nr.10 of the 23 way light blue connector coming out of the central under the dashboard, on the left of the steering column.

