

CAR SECURITY

www.cobra.it	

SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

MAKE VOLKSWAGEN

MOD.

LUPO

YFAR

98 →

PETROL DIESEL X

REV. 00

ALARM/SIREN POSITION

Position the compact alarms and the sirens in the engine compartment, on the left of the shock absorber, drivers side. To pass the cables use the original core hitch on the right of the bulkhead that divides the engine compartment and the passengers compartment.

CENTRAL UNIT POSITION

Position the modular systems and the modules under the dashboard, drivers

side.

POWER SUPPLY

+30: Connect to the original bolt marked "+ 30" on the feeder busbar, under the

dashboard, drivers side.

-31: Connect with a ring terminal directly to the car body.

IGNITION WIRE

+ 15/50: Connect to the BLACK wire located in the light brown connector

behind the left lateral bulkhead, drivers side.

DIRECTION INDICATORS

Connect to the BLACK/GREEN wires at the position nr. 1 of the black connector and BLACK/WHITE at the position nr. 6 in the light blue connector located on the connectors holder plate under the dashboard, drivers side.

ELECTRIC WINDOWS

Such vehicle has a Comfort system, so to make the closure of the windows it is

necessary to time the vehicle doors locking at 24s.

CENTRAL DOORS LOCKING

Negative control signal

Connect to the LIGHT BLUE/VIOLET wire (unlock) at the position nr. 6 and GREY/YELLOW wire (lock) at the position nr. 5 located in the wiring harness coming out of the light brown connector, behind the left lateral bulkhead, drivers

side.

IMMOBILISATION POINT 1

Gasoil pump

Cut the 1,5 mm² RED/GREEN wire at the position nr. 4 located in the wiring harness, under the sill cover, driver's side.

STARTER

+50: Cut the 2 mm² RED/BLACK wire in the wiring harness that comes out of

the connector of the ignition key.

BONNET SWITCH

Install an additional switch on the headlamp support plate near the original

bonnet bumper rubber.

DOORS SWITCH

Connect to the BROWN/WHITE wire located in the wiring harness under the sill cover, driver's side. Check the wire as there are other two wires of the same

color.

BOOT SWITCH

Connect to the BROWN/WHITE wire located in the wiring harness under the sill cover, driver's side. Check the wire as there are other two wires of the same

color.