

CAR SECURITY

SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

X

www.cobra.it

MAKE VOLKSWAGEN

MOD. NEW BEETLE YEAR 01 -

DIESEL

PETROL

ALARM/SIREN **POSITION**

Position the compact alarms and the sirens behind the headlamp, passenger's side.

CENTRAL UNIT POSITION

Position the modular systems and the modules under the dashboard.

POWER SUPPLY

+ 30: connect to the RED wire located in the wiring harness coming out of the

ignition key.

- 31: connect to the ground terminal located behind the sillcover, driver's side.

IGNITION WIRE

+15/54: connect to the YELLOW wire located in the wiring harness coming out of

the ignition key.

DIRECTION INDICATORS

Connect to the PINK wire at the position nr. A3 and to the VIOLET wire at the position A4, in the connector marked P202 in the lockings central behind the

steering column.

ELECTRIC WINDOWS

Negative control Comfort closing

The closing of the windows is obtained timing the YELLOW/BLUE wire of the

doors locking.

CENTRAL DOORS LOCKING Negative control signal

Connect to the YELLOW/BLUE wire (lock) and to the GREEN/RED wire (unlock)

located in the wiring harness that goes to the lock directly iside the driver's side

door.

IMMOBILISATION POINT

Fuel pump

Cut the BLUE/RED wire located in the wiring harness behind the driver's side

sillcover.

STARTER

+50: Cut the RED/BLACK wire located in the wiring harness coming out of the 6

way light brown connector, located on the connector's holder plate, under the

driver's side dashboard.

BONNET SWITCH

Install an additional switch on the front headlamp support plate, driver's side.

DOORS SWITCH

Connect to the GREEN/GREY wire, at the position 27, in the connector marked

P201 in the central locking unit placed behind the steering column.

BOOT SWITCH

Connect to the VIOLET wire, at the position nr. 23, in the connector marked P201

in the central locking unit placed behind the steering column.