



CAR SECURITY

SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

www.cobra.it

MAKE **VOLKSWAGEN** MOD. **NEW BEETLE** YEAR **01** → PETROL
DIESEL

ALARM/SIREN POSITION	Position the compact alarms and the sirens behind the headlamp, passenger's side.
CENTRAL UNIT POSITION	Position the modular systems and the modules under the dashboard.
POWER SUPPLY	+ 30: connect to the RED wire located in the wiring harness coming out of the ignition key. - 31: connect to the ground terminal located behind the sillcover, driver's side.
IGNITION WIRE	+15/54: connect to the YELLOW wire located in the wiring harness coming out of the ignition key.
DIRECTION INDICATORS	Connect to the PINK wire at the position nr. A3 and to the VIOLET wire at the position A4, in the connector marked P202 in the lockings central behind the steering column.
ELECTRIC WINDOWS	Negative control Comfort closing The closing of the windows is obtained timing the YELLOW/BLUE wire of the doors locking.
CENTRAL DOORS LOCKING	Negative control signal Connect to the YELLOW/BLUE wire (lock) and to the GREEN/RED wire (unlock) located in the wiring harness that goes to the lock directly inside the driver's side door.
IMMOBILISATION POINT	Gasoil pump Cut the RED/VIOLET wire located in the wiring harness coming out of the fuse nr. 32 in the fuse box, fixed on the left, under the dashboard, driver's side.
STARTER	+50: Cut the RED/BLACK wire located in the wiring harness coming out of the 6 way light brown connector, located on the connector's holder plate, under the driver's side dashboard.
BONNET SWITCH	Install an additional switch on the front headlamp support plate, driver's side.
DOORS SWITCH	Connect to the GREEN/GREY wire, at the position 27, in the connector marked P201 in the central locking unit placed behind the steering column.
BOOT SWITCH	Connect to the VIOLET wire, at the position nr. 23, in the connector marked P201 in the central locking unit placed behind the steering column.