


## CAR SECURITY

SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 01

www.cobra.it	
MAKE VOLKSWAC	GEN MOD. NEW BEETLE* YEAR 02 ® DIESEL
* Models with original equipment keyless ALARM/SIREN POSITION	entry system. Position the compact alarms and the sirens behind the headlamp, passenger's side.
CENTRAL UNIT POSITION	Position the modular systems and the modules under the dashboard.
POWER SUPPLY	<ul> <li>+30: connect to the RED wire located in the wiring harness coming out of the ignition key.</li> <li>- 31: connect to the ground terminal located behind the sillcover, driver's side.</li> </ul>
IGNITION WIRE	+15/54: connect to the YELLOW wire located in the wiring harness coming out or the ignition key.
DIRECTION INDICATORS	Connect to the PINK wire at the position nr. A3 and to the VIOLET wire at the position A4, in the connector marked P202 in the lockings central behind the steering column.
ELECTRIC WINDOWS	<b>Negative control</b> <b>Comfort closing</b> The closing of the windows is obtained timing at 12/24s the YELLOW/BLUE wire located in the horizontal wiring harness inside the driver's side door.
ACTIVAT./DEACTIVATION CONTROLS	Refer to the <b>diagram nr. 157</b> .
IMMOBILISATION POINT	Fuel pump Cut the BLUE/RED wire located in the wiring harness behind the driver's side sillcover.
STARTER	<b>+50:</b> Cut the RED/BLACK wire located in the wiring harness coming out of the 6 way light brown connector, located on the connector's holder plate, under, on the left of the driver's side dashboard.
BONNET SWITCH	Install an additional switch on the front headlamp support plate, driver's side.
DOORS SWITCH	Connect to the GREEN/GREY wire, at the position 27, in the connector marked P201, in the central locking unit placed behind the steering column.
BOOT SWITCH	Connect to the VIOLET wire, at the position nr. 23, in the connector marked P201 in the central locking unit placed behind the steering column.

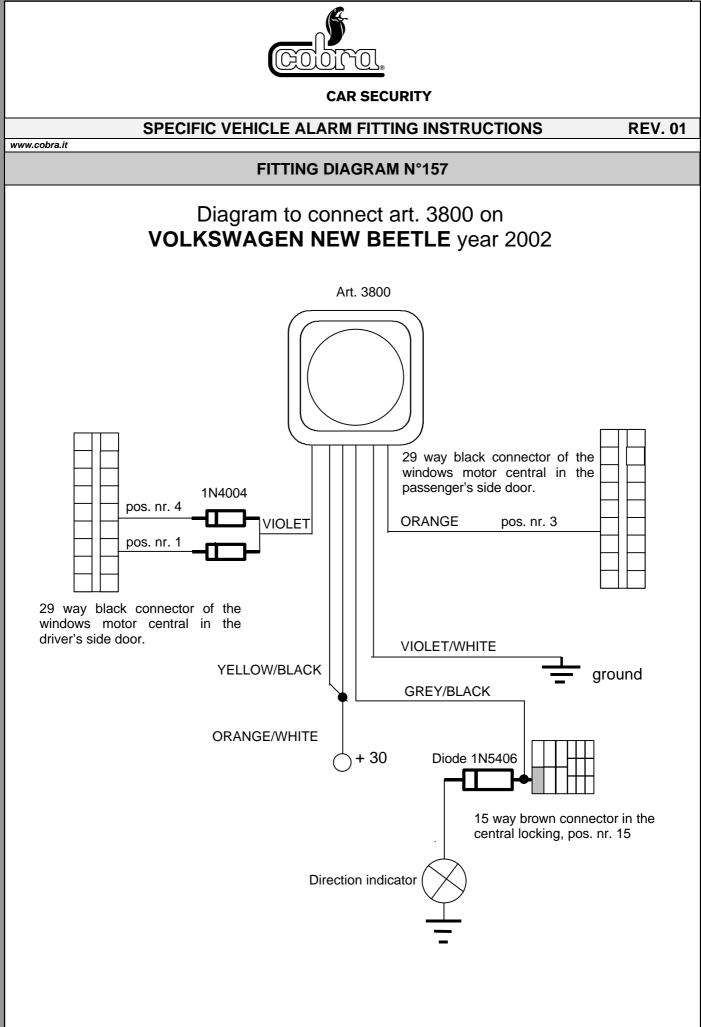

Note: This information is not binding, therefore it must be considered only an example for installation purposes that must be executed as per the instructions given on the product installation manual.

vonbe02gbbtr1.doc