



## CAR SECURITY

### SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

[www.cobra.it](http://www.cobra.it)

MAKE **VOLKSWAGEN** MOD. **NEW BEETLE** YEAR **99** → PETROL  DIESEL

<b>ALARM/SIREN POSITION</b>	Position the compact alarms and the sirens on the right of the engine compartment or, alternatively, on the support bracket of the battery.
<b>CENTRAL UNIT POSITION</b>	Position the modular systems and the modules under the dashboard in the space above the fuse box.
<b>POWER SUPPLY</b>	<b>+ 30:</b> connect to the clamp marked "+30" directly on the terminal strip located near the relay box, under the dashboard driver's side or, alternatively, to the RED/GREEN wire on the coming out of the arrows switch. <b>- 31:</b> connect to the shunting of the general bulks on the terminal edge of the support of the central unit, under the dashboard, driver's side.
<b>IGNITION WIRE</b>	<b>+ 15/54:</b> connect to the 1 mm <sup>2</sup> BLACK/GREEN wire located at the position nr. 2 of the LIGHT BROWN connector marked T6, under the dashboard, driver's side.
<b>DIRECTION INDICATORS</b>	Connect to the 1 mm <sup>2</sup> WHITE/BLACK wire or GREEN/BLACK wire located at the positions nr. 13 and nr. 14 of the 23 way black connector marked T23 in the power plant of the vehicle.
<b>ELECTRIC WINDOWS</b>	<b>Comfort closing</b> The closing of the windows is obtained timing the YELLOW/BLUE doors closure wire with a negative control signal.
<b>CENTRAL DOORS LOCKING</b>	<b>Negative control signal</b> Connect to the YELLOW/BLUE wire (lock) and WHITE/GREEN wire (unlock) located directly in the wiring harness inside the driver's side door.
<b>IMMOBILISATION POINT 1</b>	<b>Fuel pump</b> Cut the VIOLET/WHITE wire located at the position nr. 6 of the red connector marked "S3", on the rear of the plate of the relay, on the left of the steering column.
<b>STARTER</b>	<b>+50:</b> Cut the RED/BLACK wire located at the position nr. 3 of the 6 way light brown connector marked "T6", under the left side of the dashboard.
<b>BONNET SWITCH</b>	Install an additional switch on the front headlamp support plate. As this plate is plastic made, it is necessary to make a ground connection of the switch body.
<b>DOORS SWITCH</b>	Connect to the BLUE/GREY wire located at the position nr. 16 of the 23 way black connector of the central doors locking unit.
<b>BOOT SWITCH</b>	Connect to the BROWN/BLACK wire located at the position nr. 15 of the 23 way black connector in the central doors locking unit.