



CAR SECURITY

SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

www.cobra.it

MAKE **VOLKSWAGEN** MOD. **NEW BEETLE*** YEAR **99** → PETROL
DIESEL

* Models with original equipment keyless entry system.

ALARM/SIREN POSITION	Position the compact alarms and the sirens on the right of the engine compartment or, alternatively, on the support bracket of the battery.
CENTRAL UNIT POSITION	Position the modular systems and the modules under the dashboard in the space above the fuse box.
POWER SUPPLY	+ 30: connect to the clamp marked "+30" directly on the terminal strip located near the relay box, under the dashboard driver's side or, alternatively, to the RED/GREEN wire on the coming out of the arrows switch. - 31: connect to the shunting of the general bulks on the terminal edge of the support of the central unit, under the dashboard, driver's side.
IGNITION WIRE	+ 15/54: connect to the 1 mm ² BLACK/GREEN wire located at the position nr. 2 of the LIGHT BROWN connector marked T6, under the dashboard, driver's side.
DIRECTION INDICATORS	Connect to the 1 mm ² WHITE/BLACK wire or GREEN/BLACK wire located at the positions nr. 13 and nr. 14 of the 23 way black connector marked T23 in the power plant of the vehicle.
ELECTRIC WINDOWS	Comfort closing The closing of the windows is obtained timing the YELLOW/BLUE doors closure wire with a negative control signal.
ALARM CONTROLS	Positive control signal Connect to the YELLOW/light BLUE wire (setting on) and VIOLET/YELLOW wire (setting off) located directly in the wiring harness inside the driver's side door.
IMMOBILISATION POINT 1	Fuel pump Cut the VIOLET/WHITE wire located at the position nr. 6 of the red connector marked "S3", on the rear of the plate of the relay, on the left of the steering column.
STARTER	+50: Cut the RED/BLACK wire located at the position nr. 3 of the 6 way light brown connector marked "T6", under the left side of the dashboard.
BONNET SWITCH	Install an additional switch on the front headlamp support plate. As this plate is plastic made, it is necessary to make a ground connection of the switch body.
DOORS SWITCH	Connect to the BLUE/GREY wire located at the position nr. 16 of the 23 way black connector of the central doors locking unit.
BOOT SWITCH	Connect to the BROWN/BLACK wire located at the position nr. 15 of the 23 way black connector in the central doors locking unit.