



## CAR SECURITY

### SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

www.cobra.it

MAKE **VOLKSWAGEN** MOD. **PASSAT \*** YEAR. **02** → PETROL  DIESEL

\* Models with original equipment keyless entry system

**ALARM/SIREN POSITION** Position the compact alarms and the sirens under the cooling fluid bowl in the engine compartment.

**CENTRAL UNIT POSITION** Position the modular systems and the modules under the dashboard, driver's side.

**POWER SUPPLY**  
**+30:** connect with a 6 mm<sup>2</sup> eyelet faston to the feed bar located under the dashboard, driver's side.  
**-31:** connect to one of the ground terminals located behind the plastic covering on the base of the driver's side pillar.

**IGNITION WIRE** **+15/54:** connect to the BLACK/BLUE wire at the position nr. 4 of the 10 way connector, marked 15, behind the driver's side bulkhead.

**DIRECTION INDICATORS** Connect to the BLACK/WHITE wire at the position nr. 9 and to the BLACK/GREEN wire at the position nr. 10 of the 10 way light brown connector, marked 12, of the connectors holder support, behind the bonnet opening lever.

**ELECTRIC WINDOWS** **Negative control signal**  
The closing of the electric windows is obtained timing at 24s. the RED/GREEN wire used for the closing of the doors.

**ACTIVAT./DEACTIVATION CONTROLS** **Connections antitheft/vehicle**

Art.3800	Vehicle	Position
YELLOW/BLACK	BLACK/GREY (engine)	pos. nr.11
GREY/BLACK	BLACK/BLUE (engine)	pos. nr. 1
VIOLET/WHITE	ground	car body
ORANGE	RED/BLUE	pos. nr. 4
VIOLET	RED/GREEN	pos. nr.24
ORANGE/WHITE	+30	in the fuse box

To make these connections it is necessary to keep off the panel of the driver's side door. The wires are located in the wiring harness coming out of the driver's side switch. As alternative, the same wires are located in the wiring harness coming out of the 29 way black connector of the windows/locking central always inside the driver's side door.

**IMMOBILISATION POINT** **Gasoil pump**  
Cut the BLACK wire, at the position nr. 5, of the 10 way orange connector located in the lower part of the aluminium covered central, in the black box, in the windshield wiper compartment, driver's side.

**STARTER** **+50:** Cut the wire located in the wiring harness coming out of the ignition key, at the position marked "+50".

**BONNET SWITCH** Connect to the RED/BROWN wire at the position nr. 6, of the 10 way light brown connector, marked 12, of the connectors holder support, behind the covering of the bonnet opening lever.

**DOORS SWITCH** Connect to the BROWN/WHITE wire, at the position nr. 6, in the 10 way light green connector, marked 6, of the connectors holder support, behind the covering of the bonnet opening lever.

**BOOT SWITCH** Connect to the BROWN/BLACK wire at the position nr. 7 or nr. 10, in the 23 way black connector of the modular system placed in the box under the moquette on front of the driver's seat.