

CAR SECURITY

SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

www.cobra.it

VOLKSWAGEN

POLO

YEAR.

 $00 \rightarrow$

PETROL DIESEL

X

ALARM/SIREN

POSITION

Position the compact alarms and the sirens in the engine compartment, on the

shock absorber, driver's side.

CENTRAL UNIT POSITION

Position the modular systems and the modules on the left, under the dashboard,

driver's side.

POWER SUPPLY

+ 30: connect to the 4 mm² RED wire located in the multiway connector in the

fuse box.

- 31: connect with a cable terminal directly to the car body.

IGNITION WIRE

+15/54: connect to the 1,5 mm² YELLOW/RED wire located in the brown

connector, on the support of the connectors holder, behind the fuse box.

DIRECTION INDICATORS

Connect to the BLACK/GREEN wire at the position nr. 1 in the 10 way black connector and to the BLACK/WHITE wire at the position nr. 8, in the 10 way light blue connector located on the support of the connectors holder, behind the fuse

box.

ELECTRIC WINDOWS

Comfort closing Positive control signal

The closing of the windows is obtained timing the WHITE/YELLOW doors closure

wire coming out of the driver's side door.

CENTRAL DOORS LOCKING Positive control signal

Connect to the WHITE/YELLOW wire (lock) and to the WHITE/GREEN wire

(unlock) located in the wiring harness coming out of the driver's side door.

IMMOBILISATION POINT 1

Cut the 2 mm² YELLOW/RED wire located in the taped wiring harness behind the

sill cover, driver's side.

STARTER

+50: Cut the 2,5 mm² RED/BLACK wire located in the wiring harness coming out of

the connector of the ignition key.

BONNET SWITCH

Install an additional switch on the front headlamps bulkhead, near the original

bonnet bumper rubber.

DOORS SWITCH

Connect to the BROWN/WHITE wire at the position nr. 3, in the 10 way black

connector located behind the sill cover, driver's side.

BOOT SWITCH

Connect to the BROWN/RED wire located in the wiring harness coming out of the

boot lamp.