



CAR SECURITY

SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

www.cobra.it

MAKE **VOLKSWAGEN**

MOD.

POLO

YEAR. **02** →

PETROL
DIESEL

ALARM/SIREN POSITION	Position the compact alarms and the sirens on the wheelhouse, passenger's side.
CENTRAL UNIT POSITION	Position the modular systems and the modules under the dashboard, driver's side.
POWER SUPPLY	+ 30: connect to the clamp marked '+30' on the feeding rod, under the dashboard, driver's side. - 31: connect with a cable terminal directly to the car body.
IGNITION WIRE	+15/54: connect to the wire at the position marked '+15' directly in the connector coming out of the ignition key.
DIRECTION INDICATORS	Connect to the WHITE/BLACK and GREEN/BLACK wires located in the wiring harness behind the driver's side sill cover.
ELECTRIC WINDOWS	Negative control signal The closing of the windows is obtained timing the locking at 24s.
CENTRAL DOORS LOCKING	Negative control signal Connect both the locking and unlocking wires of the antitheft to the WHITE/LIGHT BLUE wire located in the wiring harness coming out of the driver's side door, behind the left lateral bulkhead, driver's side. Note: interpose a 180 Ohm resistance in series at the ORANGE wire (unlock control of the antitheft).
IMMOBILISATION POINT	Gasoil pump Cut the BLACK wire, at the position nr. 12, of the light brown connector marked 'XS4' located in the lower part of the cross-connecting central.
STARTER	+50: Cut the BLACK wire located in the wiring harness coming out of the connector of the ignition key.
BONNET SWITCH	Install an additional switch on the front headlamp support plate, driver's side.
DOORS SWITCH	Connect to the BROWN/BLACK wire located in the wiring harness coming out of the lamp.
BOOT SWITCH	Connect to the BROWN/YELLOW wire located at the position nr. 1, in the wiring harness coming out of the red connector marked 'XS5'.