



## CAR SECURITY

### SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

[www.cobra.it](http://www.cobra.it)

MAKE **VOLKSWAGEN** MOD. **POLO X** YEAR **97** → PETROL  DIESEL

<b>ALARM/SIREN POSITION</b>	Position the compact alarms and the sirens in the engine compartment, on the bulkhead making as support of the engine, drivers side.
<b>POWER SUPPLY</b>	<b>+ 30:</b> connect to the 3 mm <sup>2</sup> RED wire located in the wiring harness of the general supply of the fuse box. <b>- 31:</b> connect to one of the 1,5 mm <sup>2</sup> BROWN wires located in the general supply wiring behind the left lateral bulkhead.
<b>IGNITION WIRE</b>	<b>+ 15/54:</b> connect to the BLACK wire located in the green connector in the fuse box.
<b>DIRECTION INDICATORS</b>	Connect to the 0,5 mm <sup>2</sup> GREEN/BLACK wire located in the 10 way black connector and 0,5 mm <sup>2</sup> BLACK /WHITE wire located in the 10 way light blue connector in the fuse box.
<b>ELECTRIC WINDOWS</b>	<b>Negative control signal</b> <b>Front window, drivers side:</b> cut the 2 mm <sup>2</sup> RED/WHITE wire. <b>Front window, passengers side:</b> cut the 2 mm <sup>2</sup> RED/YELLOW wire. Connections are made directly on the coming out of the switches of the respective windows.
<b>CENTRAL DOORS LOCKING</b>	<b>Positive control signal</b> Connect to the GREY/BLACK wires (unlock) and GREY/RED (lock) located in the coming out of the door, drivers side.
<b>IMMOBILISATION POINT</b>	<b>Fuel pump</b> Cut the 1,5 mm <sup>2</sup> RED/YELLOW wire located in the wiring harness under the left sill cover, drivers side.
<b>STARTER</b>	<b>+ 50:</b> Cut the RED/BLACK wire located in the green connector on the connectors holder plate under the dashboard, drivers side.
<b>BONNET SWITCH</b>	Install an additional switch on the headlamp support plate just by the headlamp on the left-hand side.
<b>DOORS SWITCH</b>	Connect to the 1 mm <sup>2</sup> BROWN/WHITE wire located behind the left lateral bulkhead, drivers side.
<b>BOOT SWITCH</b>	Connect to the wire of the light control located in the wiring harness coming out of the connector of the boot lamp.