



CAR SECURITY

SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

www.cobra.it

MAKE

VOLKSWAGEN

MOD.

SHARAN

YEAR.

01 →

PETROL
DIESEL

ALARM/SIREN POSITION

Position the compact alarms and the sirens in the engine compartment, on the support of the shock absorber, driver's side.

CENTRAL UNIT POSITION

Position the modular systems and the modules under the dashboard, driver's side. Pass the cables through the original rubber core hitch located near the servobrake valve, in the engine compartment, driver's side.

POWER SUPPLY

+ 30: connect to the 5 mm² WHITE/RED wire located in a multiway connector, in the fuse box.
- 31: connect to one of the ground derivation behind the left lateral bulkhead, driver's side.

IGNITION WIRE

+15/54: connect to the BLACK wire located in the wiring harness coming out of the fuse nr. 4, in the fuse box, under the dashboard, driver's side.

DIRECTION INDICATORS

Connect to the BLACK/GREEN wire at the position nr. 5 and to the BLACK/WHITE wire at the position nr.6, in the 8 way connector marked P3, located in the superior part of the fuse box, under the dashboard, driver's side.

ELECTRIC WINDOWS

Positive control signal

The locking of the windows is obtained timing the same GREY wire used for the doors locking.

CENTRAL DOORS LOCKING

Positive control signal

Connect to the GREY wire located in the wiring harness coming out of the driver's side door (lock) and to the GREEN/YELLOW wire at the position nr. 5, in the 12 way connector marked P5, in the fuse box (unlock).

IMMOBILISATION POINT

Immobilisation electronic central

Cut the BLACK wire coming out of the wiring harness of the injection central unit placed behind the instrument board.

STARTER

+50: Cut the RED/BLACK wire located in the wiring harness coming out of the fuse nr. 26, in the fuse box, under the dashboard, driver's side.

BONNET SWITCH

Install an additional switch on the front headlamps support grill, driver's side.

DOORS AND BOOT SWITCH

Connect to the BROWN/YELLOW wire, at the position nr. 2, coming out of the connector marked P4, located in the fuse box, under the dashboard driver's side.