


www.cobra.it

CAR SECURITY

SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

	MOD. S 40* YEAR 01 \rightarrow DIESEL X
* Models with original equipment keyless entry system.	
ALARM/SIREN POSITION	Position the compact alarms and the sirens on the wheelhouse, passenger's side.
CENTRAL UNIT POSITION POWER SUPPLY	 The modular systems and the modules should be positioned under the dashboard. +30: connect to the 4 mm² RED/WHITE wire located in the wiring harness coming out of the multiway connector at the entrance of the fuse box. - 31: connect to one of the ground terminals coming out of the original power supply behind the left lateral panel, driver's side.
IGNITION WIRE	+ 15/54: connect to the WHITE wire, at the position nr. 4, in the 22 way connector, on the locking central unit, under the central tunnel.
DIRECTION INDICATORS	Connect to the YELLOW/BROWN and GREEN/BLACK wires, in the 26 way green connector, on the locking central unit placed under the glove compartment, in the central tunnel.
ELECTRIC WINDOWS	 Positive control signal Front window, drivers side: cut the BROWN wire on the serial push botton, driver's side door. Front window, passengers side: cut the GREEN wire on the serial push botton, driver's side door. Rear window, drivers side: cut the YELLOW/WHITE wire coming out of the core hitch, driver's side door. Rear window, passengers side: cut the BROWN/WHITE wire coming out of the core hitch, driver's side door.
ACTIVAT./DEACTIVATION CONTROLS	Connections antitheft/vehicleArt.3800VehiclePositionYELLOW/BLACKGREYOn the coming out of 22 way connectorGREY/BLACKGREY/WHITEOn the coming out of 22 way connectorVIOLETYELLOW/GREYOn the coming out of 26 way connectorORANGEBROWN/GREYOn the coming out of 26 way connectorVIOLET/WHITEgroundCar bodyORANGE/WHITEpositive +30Fixed positive in the fuse boxThe 22 and 26 way connectors are located on the coming out of the central locking unitplaced under the glove compartment, in the central tunnel. Refer to the diagram nr.120.
IMMOBILISATION POINT	Gasoil pump Cut the YELLOW/RED wire at the 20A fuse, marked "ENGINE", in the relay holder box, in the engine compartment.
STARTER	+ 50: cut the GREEN wire located in the wiring harness coming out of the ignition key.
BONNET SWITCH	Install an additional switch on the front headlamp support plate, driver's side.
DOORS SWITCH	Connect to the wires: GREEN (ant.left), GREEN/ORANGE (ant. right), GREEN/RED (post. left), LIGHT BLUE/YELLOW (post. right), in the 26 way green connector, on the central doors locking unit, located under the glove compartment, in the central tunnel.
BOOT SWITCH	Connect to the BLUE/BROWN wire, in the 26 way connector, in the central doors locking unit, located under the glove compartment, in the central tunnel.

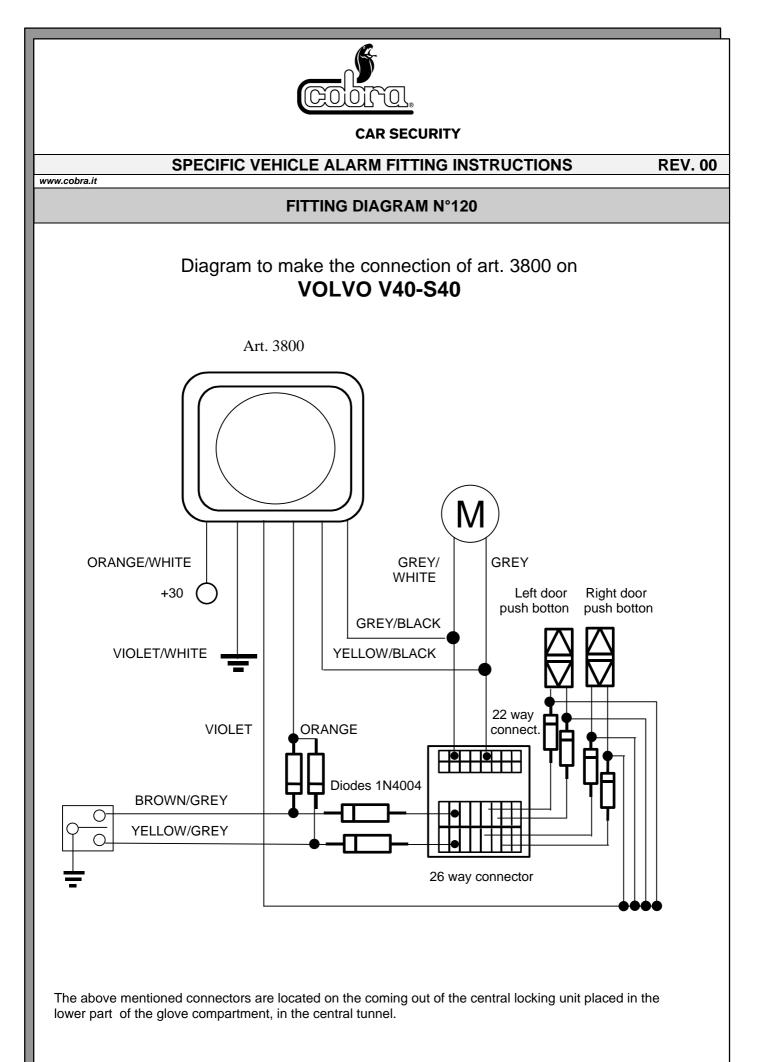

Note: This information is not binding, therefore it must be considered only an example for installation purposes that must be executed as per the instructions given on the product installation manual.

vos4001gbdt.doc