



## SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

**REV. 00**

[www.cobra.it](http://www.cobra.it)

MAKE	<b>BMW</b>	MOD.	<b>530</b>	YEAR	<b>03</b> →	PETROL <input checked="" type="checkbox"/>	DIESEL <input type="checkbox"/>
------	------------	------	------------	------	-------------	--	---------------------------------

- |                                |   |
|--------------------------------|---|
| <b>ALARM/SIREN POSITION</b>    | Position the compact alarms and the sirens on the support of the shock absorber, driver's side.   |
| <b>CENTRAL UNIT POSITION</b>   | Position the modular systems and the modules under the dashboard, driver's side.  |
| <b>POWER SUPPLY</b>            | <p><b>+30:</b> connect to the 10 mm<sup>2</sup> RED wire located in the rear part of the passenger's side glove compartment.</p> <p><b>-31:</b> connect to an original ground terminal located behind the driver's side bulkhead.</p>                                 |
| <b>IGNITION WIRE</b>           | <b>+15/54:</b> connect to the VIOLET/WHITE wire, in the white central on the left of the steering column. As alternative: connect to the GREEN/WHITE wire behind the passenger's side sill cover, in the wiring harness that supplies the rear equipments.            |
| <b>DIRECTION INDICATORS</b>    | Connect to the VIOLET/BLACK, BLUE/YELLOW, BLUE/BROWN, BLUE/GREEN, BLUE/BROWN, BLUE/BROWN with YELLOW references wires, in the 76 way white connector, on the black central on the left of the steering column.<br><b>Note:</b> Separate the lines with 1N4004 diodes. |
| <b>ELECTRIC WINDOWS</b>        | <p><b>Control signal with comfort system</b></p> <p>The locking of the windows is obtained by original radio control.</p>   |
| <b>CENTRAL DOORS LOCKING</b>   | <p><b>Negative control signal</b></p> <p>Connect with both the OPEN/CLOSE (VIOLET/ORANGE) wires of the antitheft to the YELLOW/RED wire located in the 5 way black connector coming out of the original open/close push-button placed in the central tunnel.</p>      |
| <b>IMMOBILISATION POINT</b>    | <p><b>Fuel pump</b></p> <p>Cut the VIOLET/BLACK wire located in the wiring harness coming out of the connector of the fuel pump relay located behind the passenger's side glove compartment.</p>  |
| <b>STARTER</b>                 | <b>+50:</b> Cut the 2mm <sup>2</sup> BLACK wire located in the white central on the left of the steering column.  |
| <b>BONNET SWITCH</b>           | Install an additional switch on the headlamp support plate, driver's side.  |
| <b>DOORS AND BOOT SWITCHES</b> | <p><b>Positive control</b></p> <p>Connect to the wire that actuates the lamp located in the lower part of the passenger's side glove compartment. It is necessary to invert the signal with a micro relay, as the polarity is positive.</p>                           |