



CAR SECURITY

SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 01

www.cobra.it

MAKE **CITROEN** MOD. **C 5*** YEAR. **01** → PETROL DIESEL

* Models with original equipment keyless entry system.

ALARM/SIREN POSITION	Position the compact alarms and the sirens in the engine compartment, on the bulkhead that divides the engine compartment and the passenger's compartment.
CENTRAL UNIT POSITION	Position the modular systems and the modules under the dashboard, on the left of the driver's side dashboard.
POWER SUPPLY	+ 30: connect to the 4 mm ² RED wire located in the multiway connector, in the fuse box. - 31: connect to the original ground wire located behind the left lateral bulkhead, driver's side.
IGNITION WIRE	+ 15/54: connect to the 1,5 mm ² PINK/RED wire, at the position nr.2, in the wiring harness coming out of the 16 way green connector, in the fuse box.
DIRECTION INDICATORS	Connect to the WHITE wire, at the position nr.13 and WHITE wire, at the position nr.14, in the 16 way connector, in the fuse box.
ELECTRIC WINDOWS	Positive control signal To make the windows locking it is necessary to act directly in the wiring harness coming out from each motor inside each door.
ACTIVAT./DEACTIVATION CONTROLS	Connections vehicle / 3800 Make reference to the diagram nr. 129 .
STARTER	+50: Cut the 1,5 mm ² BLUE wire located in the wiring harness coming out of the ignition key.
BONNET SWITCH	Install an additional switch on the front headlamp support plate, near the rubber trim of the bonnet.
DOORS SWITCH	Connect to the GREY wire located in the wiring harness coming out of the lamp placed in the lower part of the driver's side dashboard. Note: the polarity of the lamp is positive.
BOOT SWITCH	Connect to the WHITE wire located in the wiring harness coming out of the rear lamp of the driver's side boot.



CAR SECURITY

SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 01

www.cobra.it

FITTING DIAGRAM N° 129

Diagram for the connection of art. 3800 on **CITROEN C5**

