



SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

www.cobra.it

MAKE	FIAT	MOD.	PUNTO	YEAR	04 →	PETROL	<input checked="" type="checkbox"/>	DIESEL	<input type="checkbox"/>
ALARM/SIREN POSITION	Position the compact alarms and the sirens in the engine compartment near the support of the battery. Pass the cables through the original rubber sleeve near the brake fluid reservoir.								
CENTRAL UNIT POSITION	Position the modular systems and the modules under the dashboard, driver's side.								
POWER SUPPLY	+30: connect to the 6 mm ² WHITE/RED wire located in the multiway connector in the fuse box. -31: connect with a ring terminal directly to the car body.								
IGNITION WIRE	+15/54: connect to the 2 mm ² ORANGE wire located in the connector coming out of the ignition key.								
DIRECTION INDICATORS	Connect to the 1 mm ² PINK wire at the position nr.13 and to the PINK/WHITE wire at the position nr.12, in the 40 way black connector located in the front part of the fuse box.								
ELECTRIC WINDOWS	Controls with mixed polarity Front window, driver's side: cut the 2,5 mm ² WHITE/RED and VIOLET/YELLOW wires. Front window, passenger's side: cut the 2,5 mm ² VIOLET/BLACK wire. These connections should be made in the wiring harnesses coming out of each switches control.								
CENTRAL DOORS LOCKING	Negative controls Connect to the LIGHT BLUE/WHITE wire at the position nr.34 (lock) and to the LIGHT BLUE/YELLOW wire at the position nr.24 (unlock) in the 40 way black connector in the fuse box, under the dashboard driver's side.								
IMMOBILISATION POINT	Fuel pump Cut the ORANGE bond on the black connector, in the lower part of the relay box located near the battery.								
STARTER	+50: Cut the BROWN wire located in the wiring harness coming out of the ignition key.								
BONNET SWITCH	Install an additional switch on the headlamp support plate.								
DOORS SWITCH	Connect to the wires: RED at the position nr.8, WHITE/GREEN at the position nr.16, GREEN/GREY at the position nr.25, BLUE/VIOLET at the position nr.26, of the 40 way connector, in the fuse box, under the dashboard driver's side. Refer to the fitting diagram nr. 208.								
BOOT SWITCH	Connect to the LIGHT BLUE/BLACK wire at the position nr.36 of the 40 way connector, in the fuse box, under the dashboard driver's side. Refer to the fitting diagram nr. 208.								

FITTING DIAGRAM NR.208

Diagram for perimetrical connection with separated lines

