



## SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

www.cobra.it


MAKE **JAGUAR** MOD. **XKR** YEAR **03** → PETROL  DIESEL

<b>ALARM/SIREN POSITION</b>	Position the compact alarms and the sirens in the engine compartment.
<b>CENTRAL UNIT POSITION</b>	Position the modular systems and the modules under the dashboard, driver's side.
<b>POWER SUPPLY</b>	<b>+30:</b> connect to the 4mm <sup>2</sup> RED wire located in the wiring harness near the fuse box <b>-31:</b> connect directly to the car body.
<b>IGNITION WIRE</b>	<b>+15/54:</b> connect to the WHITE/BLACK wire, in the wiring harness near the fuse box, on the left of the steering column.
<b>DIRECTION INDICATORS</b>	<b>Connection of the front and back lines only</b> Connect to the GREEN/WHITE wire at the position nr.2 and to the WHITE wire at the position nr.1 in the 20 way grey connector, located behind the driver's side sill cover for the front direction indicators. Connect to the GREEN/WHITE wire at the position nr.3 and to the WHITE/RED wire at the position nr.1 in the 22 way white connector, in the central tunnel for the back direction indicators.
<b>ELECTRIC WINDOWS</b>	<b>These signals at the moment are not available.</b>
<b>CENTRAL DOORS LOCKING</b>	<b>Positive control signal</b> <b>Door original motor direct control</b> Cut the 0,25mm <sup>2</sup> YELLOW wire (lock) and 0,50mm <sup>2</sup> YELLOW wire (unlock) located in the connector coming out of the connector of the motor, inside the driver's side door. Refer to the <b>A section</b> for the Bridge serie antithefts and to the <b>B section</b> for the 3100, 3900 and Cobra Connex antithefts of the <b>fitting diagram nr.173</b> .
<b>IMMOBILISATION POINT</b>	<b>Fuel pump</b> Cut the wire located in the wiring harness coming out of the inertial switch.
<b>STARTER</b>	<b>+50:</b> Cut the wire located in the wiring harness coming out of the ignition key.
<b>BONNET SWITCH</b>	Install an additional switch on the flame trap bylthead.
<b>DOORS SWITCH</b>	Connect to the BROWN/WHITE wire located in the wiring harness coming out of the courtesy lamp placed on the brake pedal. The signal is with positive polarity.
<b>BOOT SWITCH</b>	Connect to the BROWN/GREEN wire located in the wiring harness coming out of the courtesy lamp placed in the boot.

**FITTING DIAGRAM NR.173**


Diagram for unlock/lock of the doors on  
**JAGUAR XKR** year 2003

**A section**

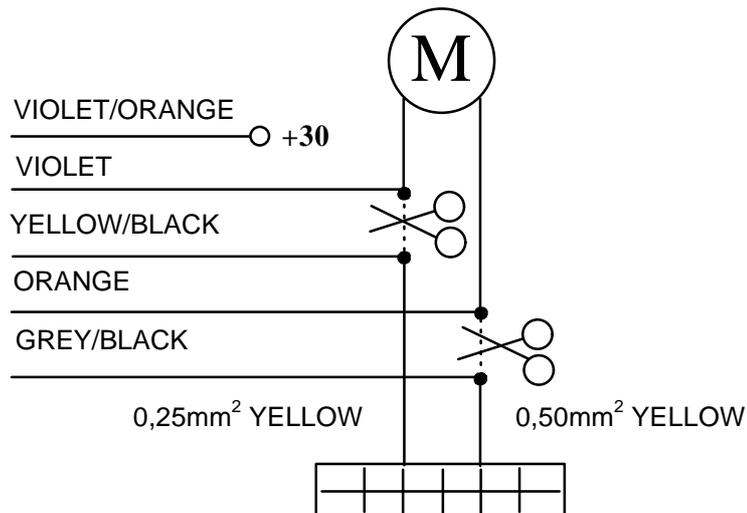

Central locking unit incorporated to the motor inside the driver's side door

**B section**

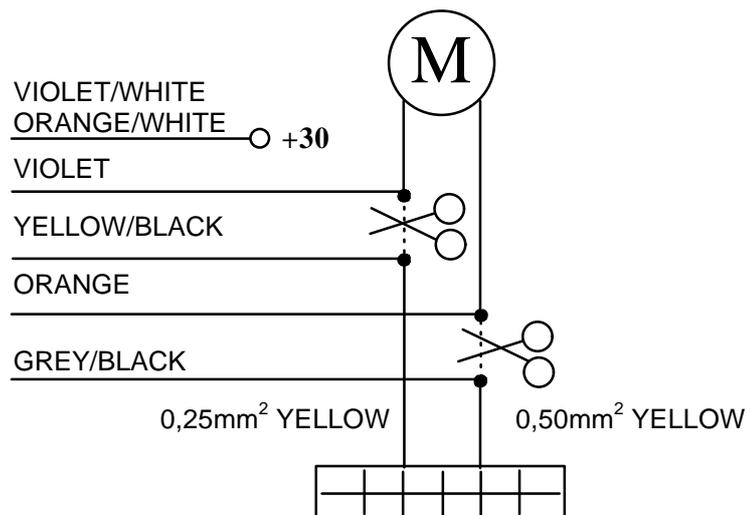

Central locking unit incorporated to the motor inside the driver's side door