



SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

www.cobra.it

MAKE	LEXUS	MOD.	IS-200*	YEAR	03 →		PETROL <input checked="" type="checkbox"/> DIESEL <input type="checkbox"/>
-------------	--------------	-------------	----------------	-------------	-------------	--	---

* Models with original equipment keyless entry system.

- ALARM/SIREN POSITION** Position the compact alarms and the sirens in the engine compartment, on the support of the shock absorber, passenger's side.
- CENTRAL UNIT POSITION** Position the modular systems and the modules under the dashboard, driver's side, behind the fuse box.
- POWER SUPPLY**
+30: connect to the WHITE wire, at the position nr.2, located in the 6 way blue connector, in the frontal part of the fuse box.
-31: connect with a cable terminal directly to the car body.
- IGNITION WIRE** **+15/54:** connect to the BLACK/RED wire, at the position nr.5, located in the 6 way blue connector, in the frontal part of the fuse box.
- DIRECTION INDICATORS** Connect to the GREEN/YELLOW wire, at the position nr.4 and GREEN/BLACK at the position nr.6, in the 7 way blue connector, in the frontal part of the fuse box.
- ELECTRIC WINDOWS**
Positive control signal
Front window, driver's side:
 cut the RED wire coming out of the relevant window push-button.
Front window, passenger's side:
 cut the RED wire coming out of the relevant window push-button.
- ACTIVAT./DEACTIVATION CONTROLS**
Connections antitheft/vehicle
- | Art.3800 | Vehicle | Position |
|--------------|--------------|---|
| GREY/BLACK | GREEN/YELLOW | Pos. nr.6 (9) in the 12 way white connector |
| YELLOW/BLACK | RED/WHITE | Pos. nr.1 (7) in the 18 way white connector |
| VIOLET/WHITE | Ground | Car body |
| ORANGE/WHITE | Ground | Car body |
| VIOLET | Ground | Car body |
| ORANGE | ground | Car body |
- The 12 way white and 18 way white connectors are located on the base of the upright support, behind the driver's side bulkhead.
- IMMOBILISATION POINT** **Fuel pump**
 Cut both the BLACK/RED wires in the wiring harness coming out of the connector of the relay marked "EFI", in the relay-holder box, in the engine compartment, passenger's side
- STARTER** **+50:** Cut the BLACK/WHITE wire at the position nr. 4, coming out of the 6 way blue connector, located on the base of the upright support, behind the driver's side bulkhead.
- BONNET SWITCH** Install an additional switch on the headlamp support plate, near the original bonnet bumper rubber.
- DOORS SWITCH** Connect to the RED/WHITE wire, at the position nr.7, in the 8 way white connector, in the frontal part of the fuse box.
- BOOT SWITCH** Connect to the RED/YELLOW wire, at the position nr.7, in the 14 way white connector, in the frontal part of the fuse box.