



**SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS**

**REV. 00**

www.cobra.it

MAKE **MAZDA** MOD. **TRIBUTE\*** YEAR **03** → PETROL  DIESEL

\* Models with original equipment keyless entry system.

- ALARM/SIREN POSITION** Position the compact alarms and the sirens on the side member of the shock absorber, passenger's side. Pass the cables using the original fairlead located in the driver's side wheelhouse.
- CENTRAL UNIT POSITION** Position the modular systems and the modules under the dashboard, driver's side.
- POWER SUPPLY** **+30:** connect to the big wire located in the wiring harness.  
**-31:** connect directly to the car body.
- IGNITION WIRE** **+15/54:** connect to the RED/YELLOW wire, at the position nr.13, of the 22 way grey connector coming out of the white central located on the left of the central tunnel.
- DIRECTION INDICATORS** Connect to the WHITE/LIGHT BLUE and GREEN/WHITE wires located in the 4 way light blue connector coming out of the relay of the direction indicators under the driver's side dashboard, behind the adjustment of the headlights inclination.
- ELECTRIC WINDOWS** **Positive control signal**  
**Front window, driver's side:**  
cut the WHITE/BLACK wire in the wiring harness coming out of the 14 way white connector, inside the driver's side door.  
**Front window, passenger's side:**  
cut the PINK/LIGHT BLUE wire.  
**Rear window, driver's side:**  
cut the YELLOW/BLACK wire.  
**Rear window, passenger's side:**  
cut the GREY/ORANGE wire.  
The above mentioned wires are located in the wiring harness coming out of the driver's side door.
- ACTIVAT./DEACTIVATION CONTROLS** **Connections antitheft/vehicle**
- | Art.3800     | Vehicle     | Position                                |
|--------------|-------------|---|
| YELLOW/BLACK | PINK        | Pos. nr.13 of the 26 way grey connector |
| GREY/BLACK   | PINK/ORANGE | Pos. nr.11 of the 26 way grey connector |
| VIOLET       | WHITE/RED   | Pos. nr. 9 of the 22 way grey connector |
| ORANGE       | Positive    | Power supply in the fuse box            |
| VIOLET/WHITE | Ground      | car body                                |
| ORANGE/WHITE | positive    | Power supply in the fuse box            |
- The 26 way and 22 way grey connectors are located in the white central placed on the left in the central tunnel.
- IMMOBILISATION POINT** Cut the YELLOW/GREEN wire located in the wiring harness coming out of the inertial switch.
- STARTER** **+50:** Cut the BROWN/LIGHT BLUE wire located in the wiring harness coming out of the connector of the ignition key.
- BONNET SWITCH** Install an additional switch on the headlamp support plate.
- DOORS AND HATCHBACK DOOR SWITCH** Connect to the VIOLET/GREEN wire, at the position nr.10, in the 26 way grey connector coming out of the white central placed on the left of the central tunnel.