



## CAR SECURITY

### SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

www.cobra.it

MAKE

**MERCEDES**

MOD.

**C CLASS\***

YEAR.

**01** →

PETROL   
DIESEL

\* Models with original equipment keyless entry system.

#### ALARM/SIREN POSITION

Position the compact alarms and the sirens on the passenger's side wheelhouse. Pass the cables using the original core hitch located in the bulkhead that divides the engine compartment and the passenger's compartment.

#### CENTRAL UNIT POSITION

Position the modular systems and the modules under the dashboard, driver's side.

#### POWER SUPPLY

+ **30**: connect to the 2 mm<sup>2</sup> RED wire located in a multiway connector, in the fuse box.  
- **31**: connect directly to the car body.

#### IGNITION WIRE

+ **15/54**: connect to the RED/BLUE wire located at the position nr. 2, coming out of the 9 way connector placed in the lower part of the fuse box.

#### DIRECTION INDICATORS

Connect to the WHITE/BLACK (ant. right), GREEN/BLACK (ant. left) wires located in the lower part of the fuse box, WHITE/BLACK (post. right), GREEN/BLACK (post. left) wires located in the wiring harness coming out of the connector of the central unit, in the driver's side boot. For the connection of the lateral direction indicators (left and right) it is suggested not to connect them as it is necessary to take off the panels of the vehicle.

#### ELECTRIC WINDOWS

##### Comfort closing

##### Negative control signal

The windows locking must be done directly with the original radio control of the vehicle.

#### ACTIVAT./DEACTIVATION CONTROLS

##### Connections antitheft/vehicle

38XX	Vehicle	Position
YELLOW/BLACK	YELLOW/GREEN	6 way connector
GREY/BLACK	YELLOW/BLUE	6 way connector
VIOLET/WHITE	GND	car body
VIOLET	GND	car body
ORANGE	GND	car body
ORANGE/WHITE	GND	car body

Connections must be done in the connector coming out of the control motor of the fuel tank cap.

#### IMMOBILISATION POINT

##### Gasoil pump

Cut the RED/BLUE wire at the position nr. 2 in the 9 way connector of the anterior central unit, under the fuses.

#### STARTER

+ **50**: Cut the VIOLET/GREEN wire at the position nr. 10 of the 10 way black connector located on the side of the steering column, under the dashboard.

#### BONNET SWITCH

Install an additional switch on the front headlamp support plate, driver's side.

#### DOORS SWITCH

Connect directly to the wire that actuates the anterior doors lamp.

#### BOOT SWITCH

Connect directly to the wire that actuates the boot lamp.