



CAR SECURITY

SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 01

www.cobra.it

MAKE	NISSAN	MOD.	MICRA*	YEAR.	01 ®	PETROL	<input checked="" type="checkbox"/>
						DIESEL	<input type="checkbox"/>

* Models with original equipment keyless entry system.

ALARM/SIREN POSITION Position the compact alarms and the sirens in the engine compartment. Pass the cables using the original core hitch located in the bulkhead that divides the engine compartment and the passenger's compartment, near the front window.

CENTRAL UNIT POSITION Position the modular systems and the modules under the dashboard, driver's side.

POWER SUPPLY
+ 30: connect to the 2 mm² WHITE/GREEN wire located in the wiring harness coming out of the TLC operating central placed under the dashboard, driver's side
- 31: connect directly to the 2 mm² BLACK wire located in the wiring harness coming out of the TLC operating central placed under the dashboard, driver's side.

IGNITION WIRE **+ 15/54:** connect to the 2 mm² WHITE/RED wire located in the wiring harness coming out of the TLC operating central placed under the dashboard, driver's side.

DIRECTION INDICATORS Connect to the GREEN/YELLOW wire with SILVER reference and to the GREEN/BLACK wire with SILVER reference located in the wiring harness coming out of the TLC operating central placed under the dashboard, driver's side.

ELECTRIC WINDOWS
Positive control signal
Front window, driver's side:
cut the RED/BLUE wire.
Front window, passenger's side:
cut the BLUE/RED wire
Connections must be done in the wiring harness coming out of the correspondent control switch.

ACTIVAT./DEACTIVATION CONTROLS

38XX	Vehicle	Position
GREY/BLACK	ground	car body
YELLOW/BLACK	ground	car body
VIOLET/WHITE	ground	car body
ORANGE	GREEN/YELLOW (BLK)	coming out TLC central
VIOLET	GREEN/BLACK (BLK)	coming out TLC central
ORANGE/WHITE	ground	car body

Connections must be done directly in the connector coming out of the TLC central located on the left of the central doors locking unit on the side of the steering column, driver's side. Refer to **diagram nr. 125**.

IMMOBILISATION POINT **Fuel pump**
Cut the BLACK/RED wire with SILVER reference located in the wiring harness behind the sill cover, driver's side.

STARTER CUT OFF **+ 50:** Cut the BLACK/RED wire located in the wiring harness coming out of the grey connector, placed near the core hitch, on the coming out of the driver's side door.

BONNET SWITCH Install an additional switch on the front headlamp support plate, driver's side.

DOORS SWITCH Connect to the RED/GREEN wire located in the wiring harness coming out of the TLC operating central placed under the dashboard, driver's side.

BOOT SWITCH Connect to the RED/BLUE wire located in the wiring harness coming out of the connector of the boot lamp



CAR SECURITY

SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 01

www.cobra.it

FITTING DIAGRAM N° 125

To make the connection of Art. 3800 on
NISSAN MICRA

