



CAR SECURITY

SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

www.cobra.it

MAKE **OPEL** MOD. **ASTRA*** YEAR **01** → PETROL DIESEL

* Models with original equipment keyless entry system.

ALARM/SIREN POSITION	Position the compact alarms and the sirens on the support of the servobrake, in the engine compartment.																					
CENTRAL UNIT POSITION	The modular systems and the modules should be positioned under the dashboard, driver's side.																					
POWER SUPPLY	<p>+ 30: connect to the 4 mm² RED wire located in the wiring harness coming out of the connector at the entrance of the fuse box.</p> <p>- 31: connect with a cable terminal to the car body.</p>																					
IGNITION WIRE	+ 15/54 : connect to the 2,5 mm ² BLACK wire in the wiring harness coming out of the 80 way green connector (position nr. 77) located behind the sill cover, driver's side																					
DIRECTION INDICATORS	Connect to the 0,75 mm ² WHITE/BLACK and GREEN/BLACK wires located in the wiring harness coming out of the 80 way green connector (positions nr. 65 and nr. 19), behind the left sill cover, driver's side.																					
ELECTRIC WINDOWS	<p>Comfort closing</p> <p>The total closing of the windows is obtained timing the RED/BLUE wire in the wiring harness of the 16 way black connector coming out of the core hitch of the driver's side door. (Use the module art. 1055 controlled by the BROWN wire of the antitheft).</p>																					
ACTIVAT./DEACTIVATION CONTROLS	<p>Connections antitheft/vehicle</p> <table border="0"> <thead> <tr> <th>Art. 3800</th> <th>Vehicle</th> <th>Position</th> </tr> </thead> <tbody> <tr> <td>YELLOW/BLACK</td> <td>YELLOW/BLACK</td> <td>Passenger's side sill cover.</td> </tr> <tr> <td>GREY/BLACK</td> <td>RED/BLACK</td> <td>Passenger's side sill cover.</td> </tr> <tr> <td>VIOLET</td> <td>BROWN/RED</td> <td>Central sill cover passenger's side.</td> </tr> <tr> <td>ORANGE</td> <td>Positive +30</td> <td>In the fuse box.</td> </tr> <tr> <td>VIOLET/WHITE</td> <td>Ground</td> <td>Car body.</td> </tr> <tr> <td>ORANGE/WHITE</td> <td>Positive +30</td> <td>in the fuse box.</td> </tr> </tbody> </table> <p>Refer to B diagram of the dedicated installations manual, in the antitheft kit.</p>	Art. 3800	Vehicle	Position	YELLOW/BLACK	YELLOW/BLACK	Passenger's side sill cover.	GREY/BLACK	RED/BLACK	Passenger's side sill cover.	VIOLET	BROWN/RED	Central sill cover passenger's side.	ORANGE	Positive +30	In the fuse box.	VIOLET/WHITE	Ground	Car body.	ORANGE/WHITE	Positive +30	in the fuse box.
Art. 3800	Vehicle	Position																				
YELLOW/BLACK	YELLOW/BLACK	Passenger's side sill cover.																				
GREY/BLACK	RED/BLACK	Passenger's side sill cover.																				
VIOLET	BROWN/RED	Central sill cover passenger's side.																				
ORANGE	Positive +30	In the fuse box.																				
VIOLET/WHITE	Ground	Car body.																				
ORANGE/WHITE	Positive +30	in the fuse box.																				
IMMOBILISATION POINT	<p>Fuel pump</p> <p>Cut the 1,5 mm² RED/BLUE wire located in the wiring harness coming out of the 80 way green connector, at the position nr.1, located behind the left sill cover, driver's side.</p>																					
STARTER	+ 50 : Cut the 2,5 mm ² BLACK/RED wire located in the wiring harness coming out of the connector of the lights switch.																					
BONNET SWITCH	Install an additional switch on the front headlamp support plate, driver's side.																					
DOORS SWITCH	Connect to the 0,5 mm ² GREY wire in the wiring harness coming out of the 80 way green connector, at the position nr. 29, located behind the left sill cover, driver's side.																					
BOOT SWITCH	Connect to the 0,5 mm ² BROWN/WHITE wire located in the wiring harness coming out of the bonnet lamp.																					