



## CAR SECURITY

### SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

www.cobra.it

|      |             |      |               |       |             |  |                                 |
|------|-------------|------|---------------|-------|-------------|--|---------------------------------|
| MAKE | <b>OPEL</b> | MOD. | <b>CORSA*</b> | YEAR. | <b>01</b> → | PETROL <input checked="" type="checkbox"/> | DIESEL <input type="checkbox"/> |
|------|-------------|------|---------------|-------|-------------|--|---------------------------------|

\* Models with original equipment keyless entry system.

| <b>ALARM/SIREN POSITION</b>           | Position the compact alarms and the sirens on the wheelhouse, driver's side.<br>To pass the cables use the original rubber core hitch located near the spout of the drainage, in the engine compartment, driver's side, then use the rubber core hitch where the pipe of the rear windshield wiper passes.  |                               |         |          |            |           |                               |              |              |                               |              |        |          |        |          |                               |        |           |                               |              |     |                      |
|---------------------------------------|---|-------------------------------|---------|----------|------------|-----------|-------------------------------|--------------|--------------|-------------------------------|--------------|--------|----------|--------|----------|-------------------------------|--------|-----------|-------------------------------|--------------|-----|----------------------|
| <b>CENTRAL UNIT POSITION</b>          | Position the modular systems and the modules under the dashboard, driver's side, on the left of the steering column.  |                               |         |          |            |           |                               |              |              |                               |              |        |          |        |          |                               |        |           |                               |              |     |                      |
| <b>POWER SUPPLY</b>                   | + <b>30</b> : connect to the 4mm <sup>2</sup> RED/WHITE wire located in a multiway connector in the fuse box.<br>- <b>31</b> : connect to one of the ground terminals located behind the left lateral bulkhead, driver's side.  |                               |         |          |            |           |                               |              |              |                               |              |        |          |        |          |                               |        |           |                               |              |     |                      |
| <b>IGNITION WIRE</b>                  | + <b>15/54</b> : connect to the BLACK/VIOLET wire located behind the left lateral bulkhead, driver's side.  |                               |         |          |            |           |                               |              |              |                               |              |        |          |        |          |                               |        |           |                               |              |     |                      |
| <b>DIRECTION INDICATORS</b>           | Connect to the BLACK/WHITE and BLACK/GREEN wires located in the wiring harness behind the left lateral bulkhead, driver's side.   |                               |         |          |            |           |                               |              |              |                               |              |        |          |        |          |                               |        |           |                               |              |     |                      |
| <b>ELECTRIC WINDOWS</b>               | <b>Comfort closing</b><br><b>Negative control</b><br>To make the windows locking it is necessary to time at 24s the same RED/YELLOW wire used to lock the doors.  |                               |         |          |            |           |                               |              |              |                               |              |        |          |        |          |                               |        |           |                               |              |     |                      |
| <b>ACTIVAT./DEACTIVATION CONTROLS</b> | <p><b>Connections antithefts/vehicle</b></p> <table border="0"> <thead> <tr> <th>Art.3800</th> <th>Vehicle</th> <th>Position</th> </tr> </thead> <tbody> <tr> <td>GREY/BLACK</td> <td>RED/BLACK</td> <td>coming out driver's side door</td> </tr> <tr> <td>YELLOW/BLACK</td> <td>YELLOW/BLACK</td> <td>coming out driver's side door</td> </tr> <tr> <td>VIOLET/WHITE</td> <td>ground</td> <td>car body</td> </tr> <tr> <td>ORANGE</td> <td>RED/BLUE</td> <td>coming out driver's side door</td> </tr> <tr> <td>VIOLET</td> <td>BROWN/RED</td> <td>coming out driver's side door</td> </tr> <tr> <td>ORANGE/WHITE</td> <td>+30</td> <td>positive in fuse box</td> </tr> </tbody> </table> <p>To make the connection refer to <b>diagram nr.107</b>.</p> | Art.3800                      | Vehicle | Position | GREY/BLACK | RED/BLACK | coming out driver's side door | YELLOW/BLACK | YELLOW/BLACK | coming out driver's side door | VIOLET/WHITE | ground | car body | ORANGE | RED/BLUE | coming out driver's side door | VIOLET | BROWN/RED | coming out driver's side door | ORANGE/WHITE | +30 | positive in fuse box |
| Art.3800                              | Vehicle   | Position                      |         |          |            |           |                               |              |              |                               |              |        |          |        |          |                               |        |           |                               |              |     |                      |
| GREY/BLACK                            | RED/BLACK   | coming out driver's side door |         |          |            |           |                               |              |              |                               |              |        |          |        |          |                               |        |           |                               |              |     |                      |
| YELLOW/BLACK                          | YELLOW/BLACK  | coming out driver's side door |         |          |            |           |                               |              |              |                               |              |        |          |        |          |                               |        |           |                               |              |     |                      |
| VIOLET/WHITE                          | ground  | car body                      |         |          |            |           |                               |              |              |                               |              |        |          |        |          |                               |        |           |                               |              |     |                      |
| ORANGE                                | RED/BLUE  | coming out driver's side door |         |          |            |           |                               |              |              |                               |              |        |          |        |          |                               |        |           |                               |              |     |                      |
| VIOLET                                | BROWN/RED   | coming out driver's side door |         |          |            |           |                               |              |              |                               |              |        |          |        |          |                               |        |           |                               |              |     |                      |
| ORANGE/WHITE                          | +30   | positive in fuse box          |         |          |            |           |                               |              |              |                               |              |        |          |        |          |                               |        |           |                               |              |     |                      |
| <b>IMMOBILISATION POINT</b>           | <b>Fuel pump</b><br>Cut the 2,5 mm <sup>2</sup> RED/BLUE wire located in the wiring harness behind the left lateral bulkhead, driver's side.  |                               |         |          |            |           |                               |              |              |                               |              |        |          |        |          |                               |        |           |                               |              |     |                      |
| <b>STARTER</b>                        | + <b>50</b> : Cut the BLACK/YELLOW wire located in the wiring harness coming out of the connector of the ignition key.  |                               |         |          |            |           |                               |              |              |                               |              |        |          |        |          |                               |        |           |                               |              |     |                      |
| <b>BONNET SWITCH</b>                  | Install an additional switch on the headlamp support plate.   |                               |         |          |            |           |                               |              |              |                               |              |        |          |        |          |                               |        |           |                               |              |     |                      |
| <b>DOORS SWITCH</b>                   | Connect to the GREY wire located in the wiring harness behind the driver's side sill cover. (This control is timed).  |                               |         |          |            |           |                               |              |              |                               |              |        |          |        |          |                               |        |           |                               |              |     |                      |
| <b>BOOT SWITCH</b>                    | Connect to the 0,35 mm <sup>2</sup> BROWN/WHITE wire coming out of the wiring harness behind the left lateral bulkhead, driver's side.  |                               |         |          |            |           |                               |              |              |                               |              |        |          |        |          |                               |        |           |                               |              |     |                      |



CAR SECURITY

SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00


www.cobra.it

FITTING DIAGRAM N° 107

Diagram for the interfacing of art.3800 on  
**OPEL CORSA year 2001**

**Art. 3800**

Located in the wiring harness  
coming out of the driver's  
side door

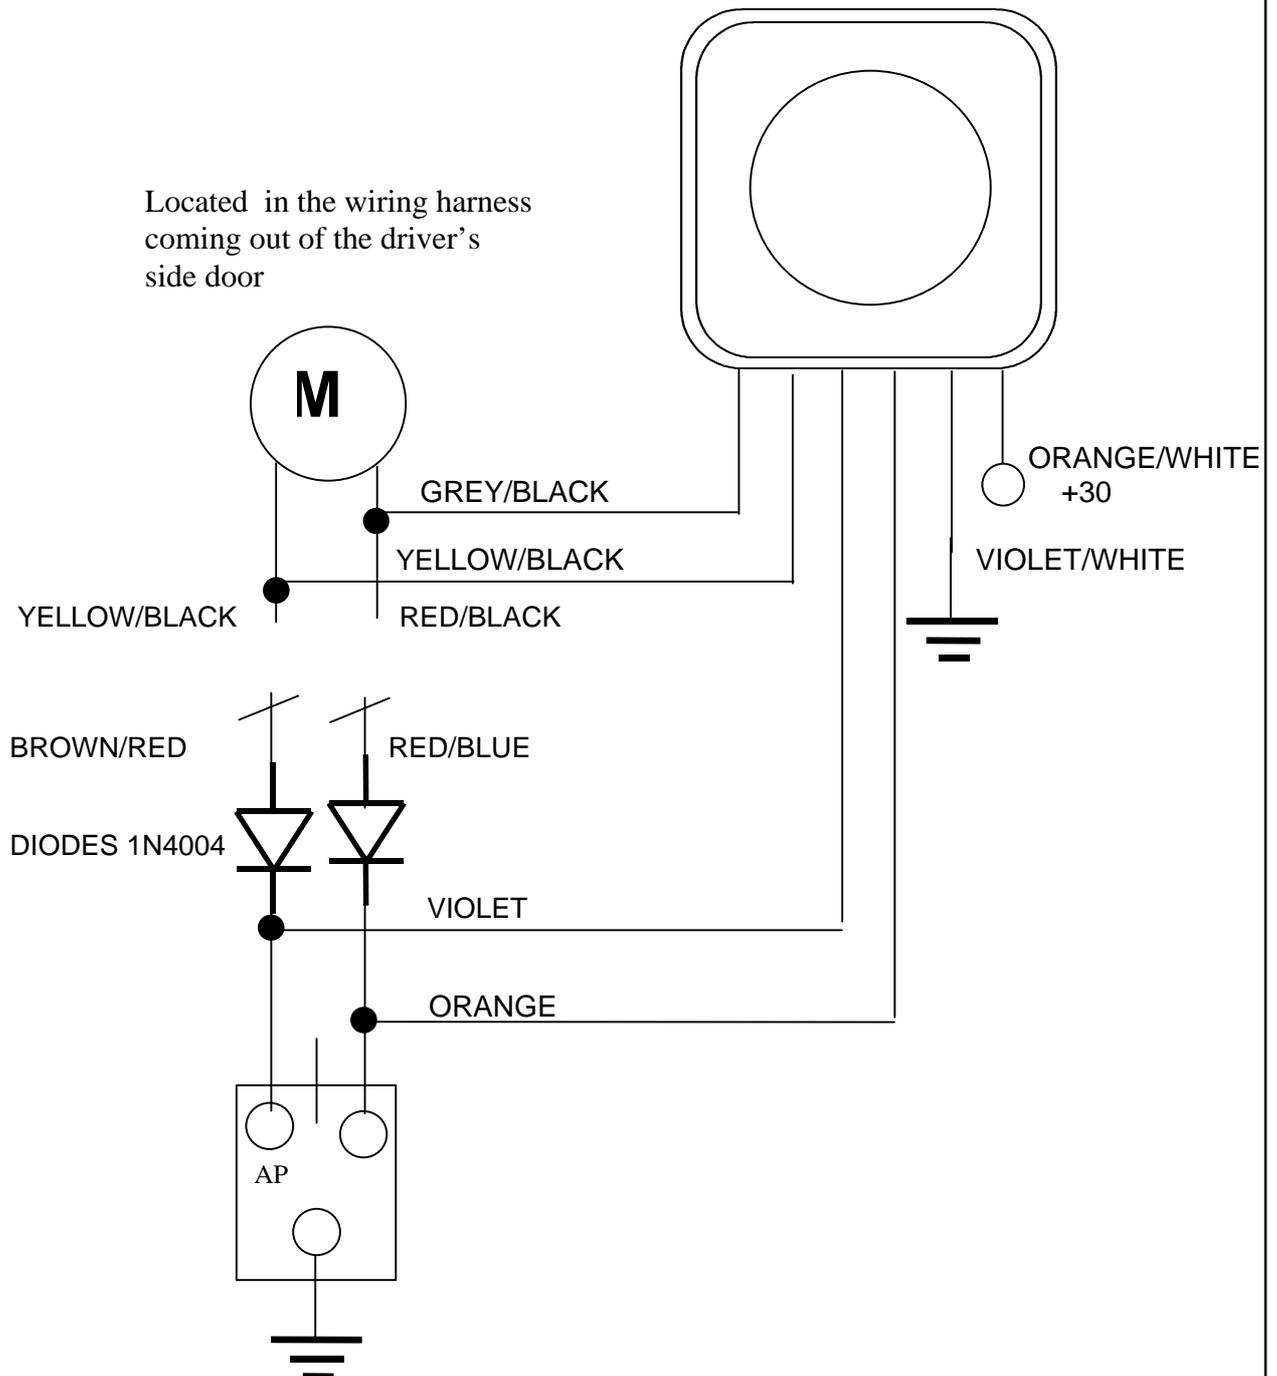

Note: This information is not binding, therefore it must be considered only an example for installation purposes that must be executed as per the instructions given on the product installation manual.

opcor01gbt.doc