



**SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS**

**REV. 00**

www.cobra.it

MAKE	<b>OPEL</b>	MOD.	<b>MERIVA</b>	YEAR	<b>03</b> →	PETROL <input checked="" type="checkbox"/>	DIESEL <input type="checkbox"/>
<b>ALARM/SIREN POSITION</b>	Position the compact alarms and the sirens on the support bracket of the battery , in the engine compartment.						
<b>CENTRAL UNIT POSITION</b>	Position the modular systems and the modules under the central tunnel.						
<b>POWER SUPPLY</b>	<b>+30:</b> connect directly to the positive pole of the battery. <b>-31:</b> connect with a cable terminal directly to the ground terminal located behind the driver's side sill cover.						
<b>IGNITION WIRE</b>	<b>+15/54:</b> connect to the RED wire, at the position nr.26, in the light blue connector located on the rear of the driver's side bulkhead.						
<b>DIRECTION INDICATORS</b>	Connect to the BLACK/WHITE wire at the position nr.6, of the 52 way green connector and to the BLACK/GREEN wire at the position nr.27, of the 47 way light blue connector. The green and light blue connector are located behind the left lateral bulkhead, driver's side.						
<b>ELECTRIC WINDOWS</b>	<b>Comfort locking</b> <b>Negative control signal</b> To make the windows locking it is necessary to time at 12s. the BROWN/BLACK wire located in the wiring harness coming out of the connector of the driver's side door.						
<b>CENTRAL DOORS LOCKING</b>	<b>Negative control signal</b> Connect to the BROWN/RED wire (lock) and to the BROWN/WHITE wire (unlock) located in the wiring harness coming out of the driver's side door.						
<b>IMMOBILISATION POINT</b>	<b>Fuel pump</b> Cut the BLACK wire, at the position nr.5, in the 8 way grey connector, directly on the coming out of the original immobilizer central, near the ignition key.						
<b>STARTER</b>	<b>+50:</b> Cut the BLACK/RED wire in the wiring harness coming out of the ignition key.						
<b>BONNET SWITCH</b>	Install an additional switch on the headlamp support plate.						
<b>DOORS SWITCH</b>	Connect to the WHITE/GREY wire, at the position nr.10, of the 47 way light blue connector, behind the left lateral bulkhead, driver's side.						
<b>BOOT SWITCH</b>	Connect to the BROWN/WHITE wire, at the position nr.13, of the 52 way green connector, behind the left lateral bulkhead, driver's side.						