



CAR SECURITY

SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

www.cobra.it

MAKE	OPEL	MOD.	TIGRA	YEAR	95 →	PETROL	<input checked="" type="checkbox"/>	DIESEL	<input type="checkbox"/>
ALARM/SIREN POSITION	Position the compact alarms and the sirens on the bracket located near the left side of the shock absorber.								
POWER SUPPLY	+ 30: connect to the 4 mm ² RED wire with GREEN tally mark located in the connector behind the fuse box. - 31: connect to the general supply wiring fastened to the car body, near the output of the drivers side door.								
IGNITION WIRE	Connect to the wire marked + 15 located on the ignition key.								
DIRECTION INDICATORS	Connect to the BLACK/GREEN and BLACK/WHITE wires located in the connector marked A3, behind the left lateral side.								
ELECTRIC WINDOWS	For vehicles provided with windows automatism: - refer to diagram nr. 9 for no driven Bridge serie antithefts (art. 5933, 3100 with BROWN wire) - refer to diagram nr. 111 for driven Bridge serie antithefts (with BROWN/WHITE wire).								
CENTRAL DOORS LOCKING	Negative control signal Connect to the BROWN/RED wire (lock) and BROWN/WHITE wire (unlock) located in the wiring harness coming out of the drivers side door.								
IMMOBILISATION POINT 1	Relay control signal Cut the 1 mm ² BLACK wire located in the connector of the black relay behind the passengers side.								
IMMOBILISATION POINT 2	Pump control signal Cut the RED/BLUE wire located in the connector corresponding to the fuse marked F1 in the fuse box, otherwise behind the bulkhead on the left lateral drivers side.								
BONNET SWITCH	Install an additional switch on the bonnet bumper near the shock absorber, drivers side.								
DOORS SWITCH	Connect to the GREY wire located in the wiring harness coming out of the driver's side door.								
BOOT SWITCH	Connect to the GREY/BLACK wire located directly on the boot lamp.								




CAR SECURITY

SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

www.cobra.it

FITTING DIAGRAM N° 9

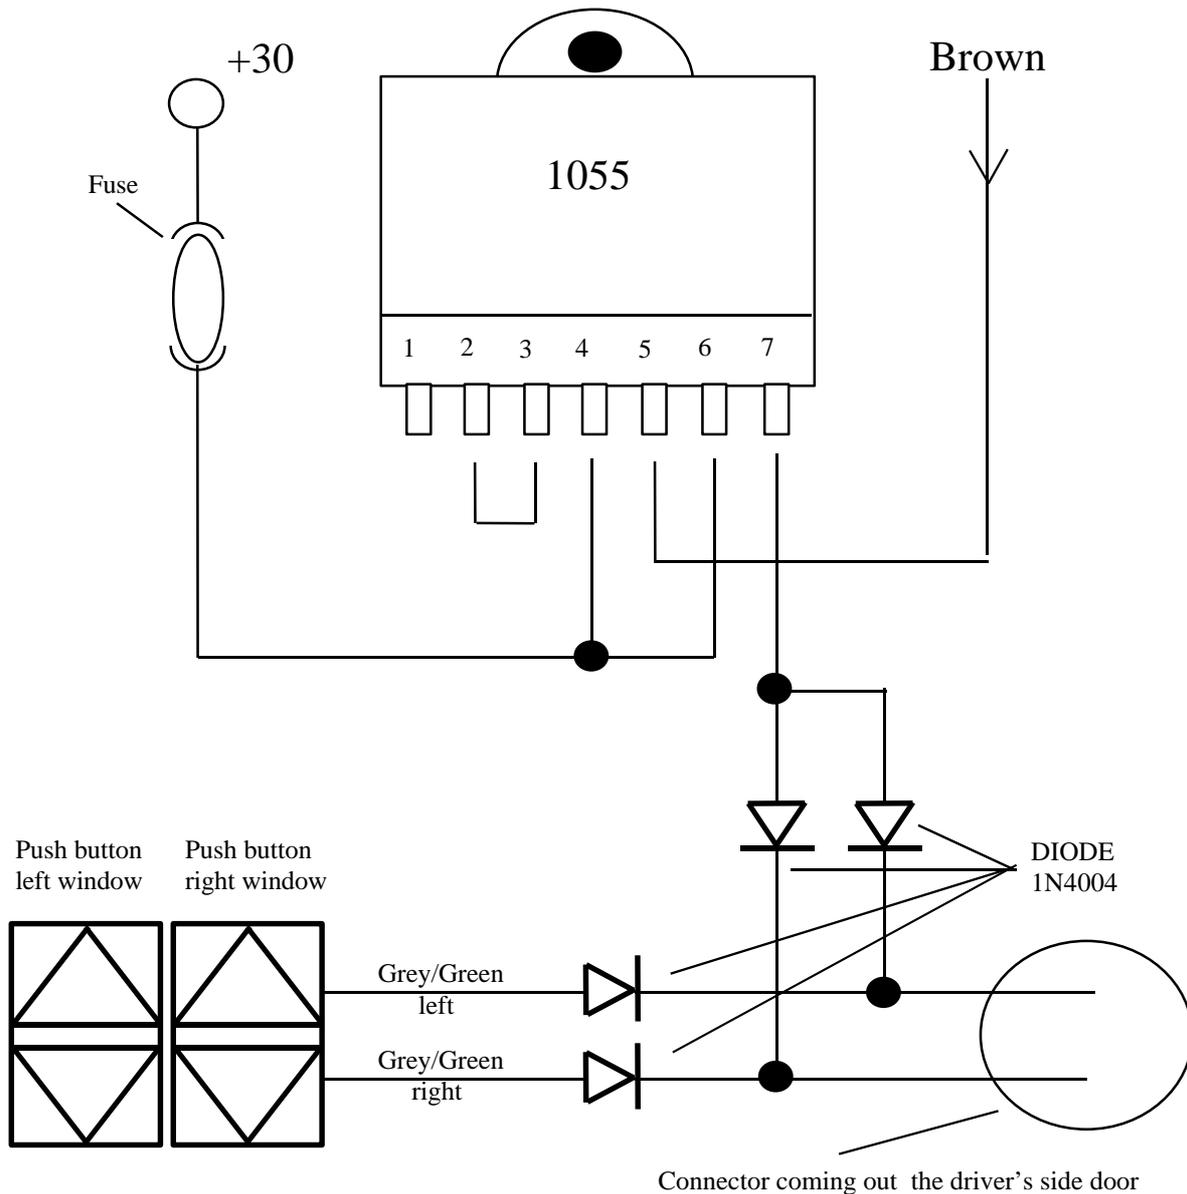

NOTE: the windows central unit will reset if it is made a connection between passenger's compartment and door or driving is left for any reason. In order to make a new reprogramming it is enough to operate the window raise for about 5" (when the window is completely closed).



CAR SECURITY

SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

www.cobra.it

FITTING DIAGRAM N° 111

Diagram to make the electric windows locking on
OPEL CORSA – TIGRA with automatism
(for Bridge serie antithefts)

