



CAR SECURITY

SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

www.cobra.it

MAKE

OPEL

MOD.

VECTRA *

YEAR.

02 →

PETROL
DIESEL

* Models with original equipment keyless entry system.

ALARM/SIREN POSITION

Position the compact alarms and the sirens on the driver's side battery bracket. Pass the cables using the pre-arrangement in the driver's side windshield wiper.

CENTRAL UNIT POSITION

Position the modular systems and the modules under the dashboard, driver's side.

POWER SUPPLY

+30: connect to a positive general supply wiring of the fuse box.
- 31: connect to a ground terminal, under, on the left of the dashboard, driver's side.

IGNITION WIRE

+15/54: connect to the BLACK wire, at the position nr.11, in the grey connector, in the fuse box under the driver's side dashboard.

DIRECTION INDICATORS

Connect to the BLACK/WHITE wire at the position nr.3 (ant. left), BLACK/WHITE at the position nr.4 (lat. left), BLACK/GREEN at the position nr.9 (lat. right) located in the 50 way black connector, in the central near the battery, in the engine compartment; to the BLACK/GREEN wire at the position nr.9 (post. right) and to the BLACK/WHITE wire at the position nr.8 (post. left) in the 33 way blue connector, in the central placed in the driver's side boot.

ELECTRIC WINDOWS

Negative control signal

The closing is obtained timing the RED/YELLOW wire, at the position nr. 25, in the 46 way black connector, on the central in the driver's side door.

ACTIVAT./DEACTIVATION CONTROLS

Connections antitheft/vehicle

Art. 3800	Vehicle	Position
YELLOW/BLACK	BLACK/YELLOW	Pos.17, in the 46 way black connector
GREY/BLACK	BLACK/RED	Pos.15, in the 46 way black connector
VIOLET	RED/YELLOW	Pos.25, in the 46 way black connector
VIOLET/WHITE	ground	car body
ORANGE	positive	supply in the fuse box
ORANGE/WHITE	positive	supply in the fuse box

The 46 way black connector is located on the way out of the central placed inside the driver's side door.

IMMOBILISATION POINT

Fuel pump

Cut the RED/BLUE wire, at the position nr. 3, in the 33 way black connector - C1 section - located in the central inside the driver's side boot.

STARTER

+50: Cut the BLACK/RED wire located in the wiring harness coming out of the central placed near the battery, in the engine compartment.

BONNET SWITCH

Install an additional switch on the headlamp support plate, driver's side.

DOORS SWITCH

Connect to the BROWN wire, at the position nr.60, in the connector placed behind the lateral bulkhead, on the left of the friction pedal.

BOOT SWITCH

Connect to the BLACK wire, at the position nr.6, in the 33 way grey connector - A1 section - in the central placed in the driver's side boot.