

## SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

www.cobra.it

REV. 00

MAKE OPEL	MOD. <b>VIVARO</b> YEAR. $03 \rightarrow $ DIESEL <b>X</b>
ALARM/SIREN POSITION	Position the compact alarms and the sirens behind the passenger's side headlamp.
CENTRAL UNIT POSITION	Position the modular systems and the modules under the dashboard, driver's side.
POWER SUPPLY	<ul> <li>+30: connect to the RED wire located in the wiring harness coming out of the ignition key.</li> <li>- 31: connect to a ground terminal located behind the driver's side bulkhead.</li> </ul>
IGNITION WIRE	+15/54: connect to the YELLOW wire in the wiring harness coming out of the ignition key.
DIRECTION INDICATORS	Connect to the PINK wire at the position A3 and VIOLET wire at the position A4, in the connector marked P202, in the central locking unit located behind the steering column.
ELECTRIC WINDOWS	Negative control signal Front window, driver's side: Cut the WHITE wire, at the position B5, in the 9 way black connector, in the window operating central, inside the driver's side door. Front window, passengers side: Cut the WHITE wire, at the position A1, in the 12 way black connector, of the serial push-button panel, in the driver's side door.
CENTRAL DOORS LOCKING	<b>Negative control signal</b> Connect to the PINK wire at the position A3 (lock) and to the GREEN wire at the position B1 (unlock), in the 6 way black connector, on the original unlock/lock push-button.
IMMOBILISATION POINT	<b>Gasoil pump</b> Cut the RED wire on the inertial switch, behind the driver's side headlamp.
STARTER	<b>+50:</b> Cut the WHITE wire located in the 4 way black connector, under the steering column.
BONNET SWITCH	Install an additional switch on the headlamp support plate, driver's side.
FRONT DOORS SWITCH	Connect to the GREEN wire, at the position nr. 27, in the connector marked P201, in the central locking unit placed behind the steering column.
BOOT AND LATERAL DOOR SWITCH	Connect to the VIOLET wire, at the position nr. 23, in the connector marked P201 in the central locking unit, behind the steering column.

opviv03gbd.doc