



## CAR SECURITY

### SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

www.cobra.it

MAKE

**PEUGEOT**

MOD.

**307\***

YEAR.

**01** →

PETROL   
DIESEL

\* Models with original equipment keyless entry system.

#### ALARM/SIREN POSITION

Position the compact alarms and the sirens in the wheelhouse, driver's side, near the original horn.

#### CENTRAL UNIT POSITION

The modular systems and the modules should be positioned under the dashboard, driver's side.

#### POWER SUPPLY

**+ 30:** connect with a wire terminal to the clamp marked '+30' located in the feed rod, in the black box, on the side of the battery, in the engine compartment.  
**- 31:** connect with a wire terminal to the clamp marked 'GND' located in the feed rod, in the black box, on the side of the battery, in the engine compartment.

#### IGNITION WIRE

**+ 15/54:** connect to the 2,5 mm<sup>2</sup> LIGHT BLUE wire located in the connector coming out of the ignition key.

#### DIRECTION INDICATORS

Connect to the wires at the positions nr. 13 and nr. 14 coming out of the wiring harness of the 16 way black connector.

#### ELECTRIC WINDOWS

##### Motors controls

This information is not available at the moment.

#### ACTIVAT./DEACTIVATION CONTROLS

**Connections antithefts/vehicle**  
Refer to the **diagram nr. 99**.

#### IMMOBILISATION POINT 1

##### Fuel pump

Cut the LIGHT BROWN wire, marked nr.1235, located in the little wiring harness placed behind the sill cover, driver's side.

#### IMMOBILISATION POINT 2

##### Relay pump feeding

Cut the LIGHT BROWN wire, marked nr.1235, located at the position nr. 11, coming out of the connector marked 'GRIS', in the driver's side fuse box, in the engine compartment.

#### STARTER

**+ 50:** Cut the YELLOW wire located in the wiring harness coming out of the 3 way connector, placed on the left of the steering column.

#### BONNET SWITCH

Install an additional switch on the front headlamp support plate, driver's side.

#### DOORS SWITCH

Connect to the wire, at the position nr. 32 of the green connector, located in the connexion with white covering, in the lower part of the fuse box, under the driver's side dashboard.

**Note: this is a positive polarity control.**

#### BOOT SWITCH

If the vehicle is provided with the boot lamp, connect to the supply wire of the lamp.



CAR SECURITY

SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

www.cobra.it

FITTING DIAGRAM N°99

Diagram for the interfacing of art. 3800 on  
**PEUGEOT 307** year 2001

